Model D4166 Safety Locking ON/OFF Switch

Instruction Sheet

Phone #: (360) 734-3482 • Online Tech Support: tech-support@shopfox.biz • Web: www.shopfox.biz



AWARNING

To reduce risk of serious burns, electrocution or death when installing this switch:

- Only use this switch to replace an existing machine switch that has the same physical configuration and equivalent electrical specifications/ratings.
- Installation must only be performed by an electrician or qualified service personnel, and all applicable electrical codes must be adhered to.
- Turn OFF and completely disconnect all power sources to the machine before installing the switch.
- Do not use this switch in wet or damp locations, or near explosive fumes or flammable liquids. It is not sealed or rated for these environments.
- Make sure there is a verified machine ground on the circuit this switch is installed.



Figure 1. D4166 Safety Locking ON/OFF Switch.

Introduction

The Model D4166 features a large ON/OFF paddle with a removable safety key that can be used to disable the switch. This switch is designed to fit into $^{7}/_{8}$ " x $1^{1}/_{2}$ " rectangular hole or be mounted over a $1^{1}/_{8}$ " x $2^{1}/_{4}$ " rectangular hole with four #5 screws.

Specifications

Rated Horsepower	2HP
Rated Voltage	125V/250V
Rated Current Amperage	20A

Printed in China



Installation

When installing the D4166 switch, use the wiring diagram in **Figure 2** to ensure proper wire connections.

AWARNING

This switch is intended to be connected to stranded wire with insulated quick-disconnect crimp-type female wire terminals having a 1/4" tab.

All crimps must be "pull-checked" to ensure that wires are securely crimped and will not fall out with moderate tension or when exposed to normal machine vibration.

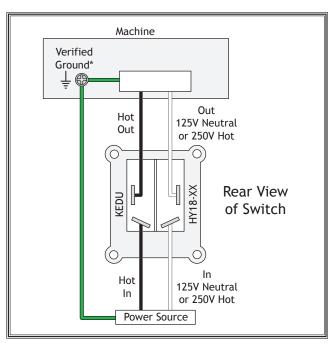


Figure 2. D4166 wiring diagram.

*The machine MUST be connected to a verified ground. In the event of certain malfunctions or breakdowns, grounding reduces the risk of electric shock by providing a path of least resistance for electric current.

Operation

To turn the switch *ON*, make sure the safety key is properly inserted, then flip the paddle up.

To turn the switch *OFF*, flip the paddle down.

To disable the switch, turn the switch *OFF*, then pull the yellow key from the switch and store it in a well hidden or secure location.