



# MODEL G8727 CREEPER INSTRUCTIONS

## **⚠️ WARNING**

To reduce the risk of serious personal injury while using this creeper:

1. Never work under a vehicle when the engine is running.
2. Set the parking brake on the vehicle.
3. Make sure the vehicle is properly supported on jack stands. **DO NOT** work under a vehicle that is only supported by a jack, cinder blocks or stacked blocks.
4. **DO NOT** work under a vehicle that has all four wheels off of the ground.
5. Make sure the wheels that are on the ground are chocked to prevent the vehicle from moving.
6. Never use the creeper as a dolly for moving objects.
7. When the creeper is not in use, lean or hang it on a wall. Never leave it on the floor.
8. Never stand on the creeper.
9. **DO NOT** allow children to play or ride on the creeper.
10. **DO NOT** modify the creeper in any way.

## Specifications

Size ..... 39" L x 17" W  
Number of Headrest Positions ..... 3  
Frame Material ..... Tubular Steel  
Cushion Material..... Vinyl Upholstered Foam



Figure 1. Model G8727.

## Operations

The Model G8727 Creeper has three headrest positions. The positions are controlled by the lever located next to the headrest.

### To adjust the headrest:

1. Lift the headrest, reposition the lever to one of the other notches, then lower the headrest.
2. Push down on the headrest to make sure it is securely positioned.

*If you need help with your new item, call our Tech Support at: (570) 546-9663.*

COPYRIGHT © OCTOBER, 2008 BY GRIZZLY INDUSTRIAL, INC.  
**WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**

#JB11230 PRINTED IN CHINA