



# MODEL G8990 120V MAGNETIC ON/OFF SWITCH INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

## **!WARNING**

To reduce risk of serious burns, electrocution or death when installing this switch:

- Only use this switch to replace an existing machine switch that has the same physical configuration and equivalent electrical specifications/ratings.
- Installation must only be performed by an electrician or qualified service personnel, and all applicable electrical codes must be adhered to.
- Turn off and completely disconnect all power sources to the machine before installing the switch.
- Do not use this switch in wet or damp locations, or near explosive fumes or flammable liquids. It is not sealed or rated for these environments.
- Make sure there is a verified machine ground on the circuit this switch is installed.



Figure 1. G8990 Magnetic ON/OFF Switch.

## Introduction

The Model G8990 features a recessed magnetic ON (|) button. The switch assembly is designed to snap into a 1" x 2" rectangular hole.

## Specifications

Rated Voltage..... 120V  
Rated Current..... 16A

COPYRIGHT © APRIL, 2011 BY GRIZZLY INDUSTRIAL, INC., REVISED JUNE, 2014 (TS)  
**WARNING: NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE  
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**

#TS13928 PRINTED IN CHINA

## Installation

When installing the G8990 switch, use the wiring diagram in **Figure 2** to ensure proper wire connections.


**Important:** Terminal A1 *MUST* be connected to either terminal 14 or 24 for the switch to work properly.

### **WARNING**

This switch is intended to be connected to stranded wire with insulated quick-disconnect crimp-type female wire terminals having a 1/4" tab.



All crimps must be "pull-checked" to ensure that wires are securely crimped and will not fall out with moderate tension or when exposed to normal machine vibration.

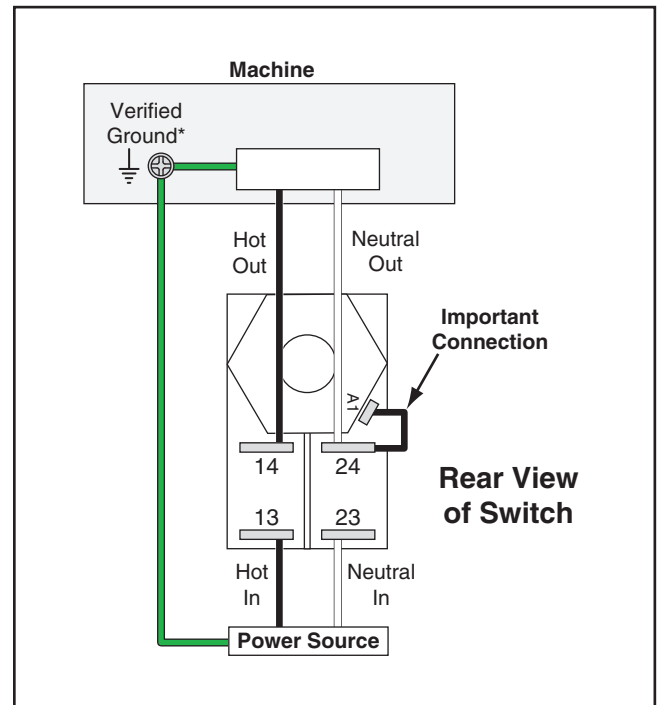

**Figure 2.** G8990 wiring diagram.

\*The machine **MUST** be connected to a verified ground. In the event of certain malfunctions or breakdowns, grounding reduces the risk of electric shock by providing a path of least resistance for electric current.

