


# How to Connect Ecogate greenBOX to Grizzly Industrial Power Remote Switch

1. The greenBOX should be set for 230V power supply (see User and Installation Guide for details).
2. Full function of the Grizzly Switch and Ecogate greenBOX will be the same as before, both units are working in "parallel". You can switch dust collector either by Grizzly switch (or Grizzly remote) or by the greenBOX (both automatically or by AUTO/MANUAL button).
3. Be careful and follow exactly recommended connection – if you would switch the wires you could cause a shortcut, fire, and/or injury!
4. All wires are 230 V AC, max. current 0.2 Amps.

FROM Grizzly Switch	To greenBOX Power Input terminal
3L2 (on power relay)	L1 (N)
13 NO (on power relay)	L2 (L)
GND (ground)	GND (ground)

FROM greenBOX Power OUTPUT terminal	TO Grizzly Switch
L1 (N)	95 (on overlay protection)
L2 (L)	A1 (on power relay)

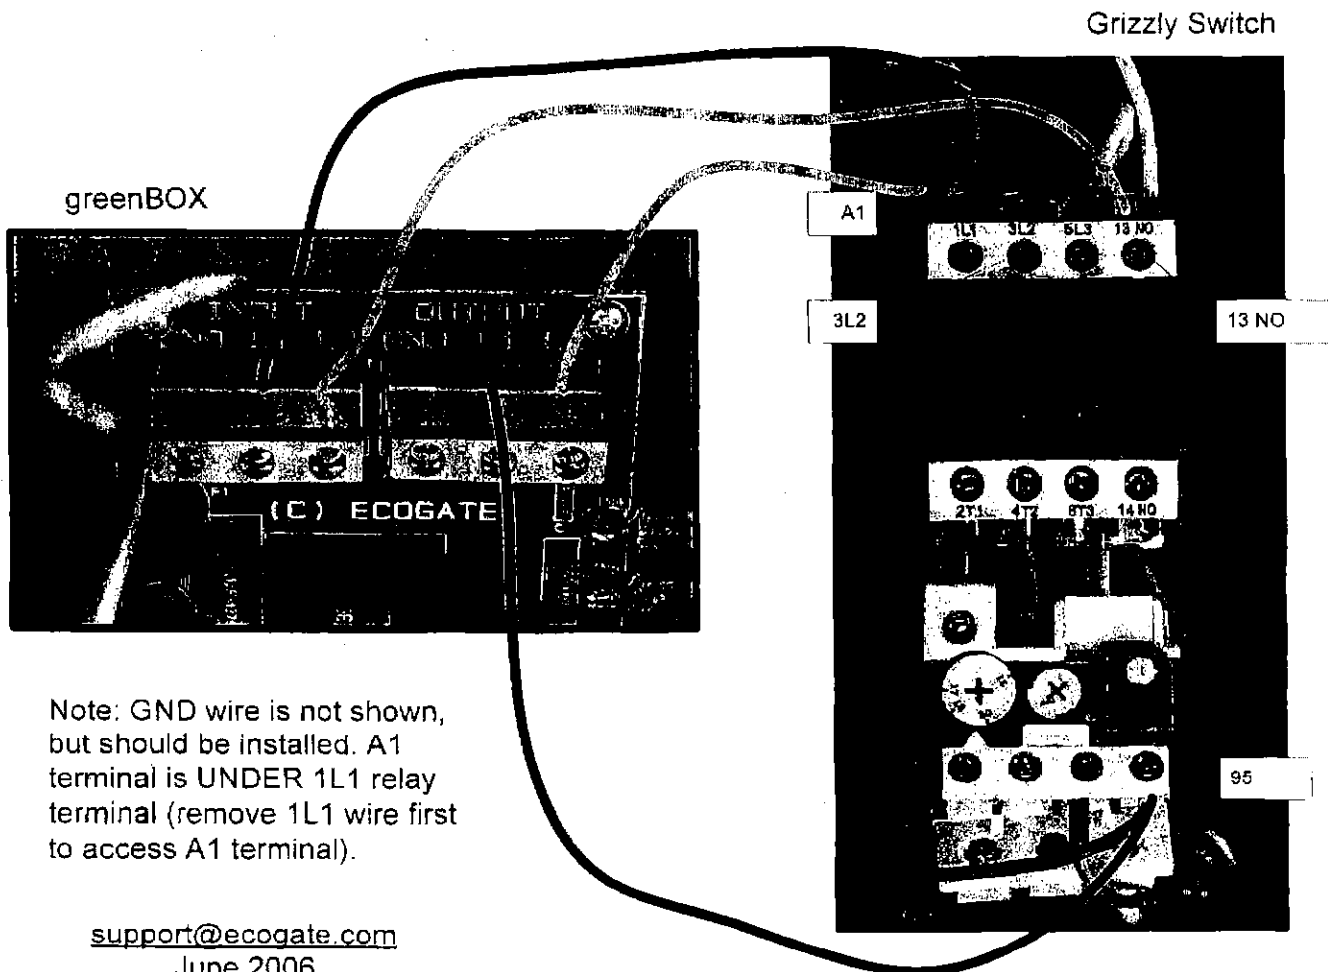

Note: GND wire is not shown, but should be installed. A1 terminal is UNDER 1L1 relay terminal (remove 1L1 wire first to access A1 terminal).