



# MODEL T21546/T21547 COMBINATION SAFE INSTRUCTIONS

## Specifications

Locking Device ... Combination Dial w/Key Assist  
**T21546:**

Overall Dimensions...13<sup>7</sup>/<sub>8</sub>"W x 10<sup>1</sup>/<sub>2</sub>"D x 10"H  
Weight.....22 lbs.

**T21547:**

Overall Dimensions.. 15"W x 12<sup>1</sup>/<sub>4</sub>"D x 11<sup>7</sup>/<sub>8</sub>"H  
Weight .....32 lbs.

## Combination

--	--	--

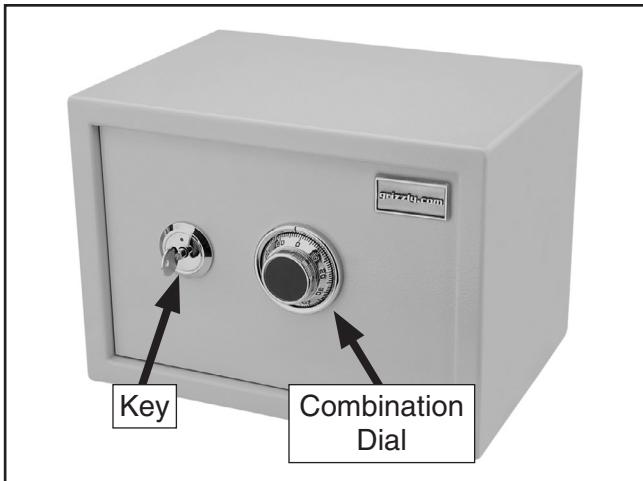


Figure 1. Model T21546 shown.

If you need help with your new safe, call our Tech Support at: (570) 546-9663.

## TIP

To prevent the possibility of condensation inside the safe that could damage the contents, keep a desiccant inside the safe.

## NOTICE

Grizzly cannot replace lost or stolen keys. Please contact your local locksmith if this happens.

### To open and lock your safe:

1. Rotate the combination dial two rotations past the first combination number, then stop on it the third rotation, as illustrated in **Figure 2**.

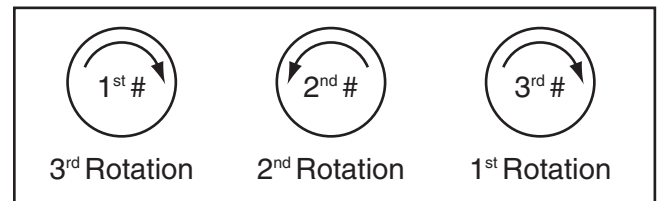


Figure 2. Sequence of dial rotations.

2. Turn the dial counterclockwise past the second combination number, then stop on it the second rotation.
3. Rotate the dial clockwise and stop on the third combination number.
4. Orient the key so that the notch in the thumb tab is facing up, then insert it into the key-hole.
5. Turn the key clockwise until it stops to withdraw the locking bolts from the cabinet frame, then open the door.
6. When finished, close the door and turn the key counterclockwise until it stops to engage the locking bolts and lock the door. disengage the locking tumblers and prevent unlocking the door with the key.

7. Remove the key and rotate the combination dial a few revolutions in either direction to disengage the locking tumblers and prevent unlocking the door with the key.
8. Keep the key in a separate secure location until needed.

