


# MAINTENANCE

1. Wipe all dirt and dust off the press
2. Apply light oil to the surface of the ram.
3. Check hoses, pressure head, and support rods for cracks or damage. Replace if necessary.
4. Remove the plug on the back of the hydraulic jack to check the oil level. Add oil if necessary, replace the plug, then pump the handle several times with the pressure release valve open to bleed the air out of the system.

*If you need additional help with this procedure, call our service department at: (570) 546-9663.*



# PARTS

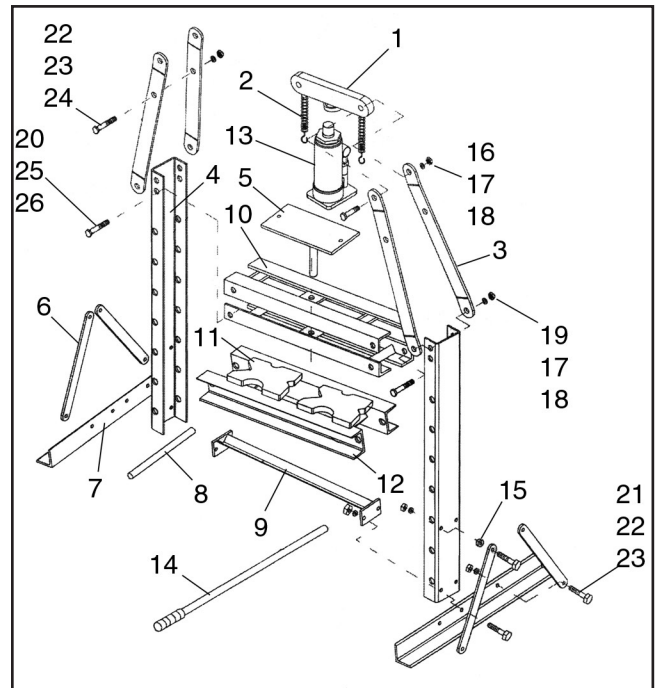

## REF PART # DESCRIPTION

REF	PART #	DESCRIPTION
1	PH6230001	HEADER
2	PH6230002	SPRING
3	PH6230003	HEADER SUPPORT
4	PH6230004	UPRIGHTS
5	PH6230005	JACK PLATE
6	PH6230006	UPRIGHT SUPPORT
7	PH6230007	BASE SUPPORT
8	PH3230008	SUPPORT ROD
9	PH6230009	SPREADER
10	PH6230010	CROSSBEAM
11	PH6230011	TABLE PLATES
12	PH6230012	TABLE
13	PH6230013	HYDRAULIC JACK
14	PH6230014	JACK HANDLE
15	PH6230015	SPACER 8MM
16	PB131M	HEX BOLT M16-2 X 65
17	PW08M	FLAT WASHER 16MM
18	PN19M	HEX NUT M16-2
19	PB132M	HEX BOLT M16-2 X 40
20	PB25M	HEX BOLT M12-1.75 X 25
21	PB07M	HEX BOLT M8-1.25 X 25
22	PLW04M	LOCK WASHER 8MM
23	PN03M	HEX NUT M8-1.25
24	PB30M	HEX BOLT M8-1.25 X 55
25	PW06M	FLAT WASHER 12MM
26	PN09M	HEX NUT M12-1.75

