

- Wipe the inside of the smoker with a sanitizing agent, and remove all grease and residue buildup.

!WARNING

- DO NOT touch hot surfaces with bare hands.**
- DO NOT put the cord, plug or heating element in water or other liquid.**
- UNPLUG the smoker before cleaning & sanitizing, and when not in use.**
- WAIT until the smoker has completely cooled before removing components.**

Model H6255 Parts List (Figure 3)

1	PH6255001	BODY
2	PH6255002	POWER CORD
3	PH6255003	GRILLS
4	PH6255004	DOOR
5	PH6255005	DRIP PAN
6	PH6255006	SAWDUST PAN
7	PH6255007	HEATING ELEMENT

Like all Grizzly products, the Model H6255 10 lb. Meat Smoker is covered by a one year warranty. Should any problems arise, please call our customer service center at (570) 546-9663 or e-mail us at techsupport@grizzly.com.

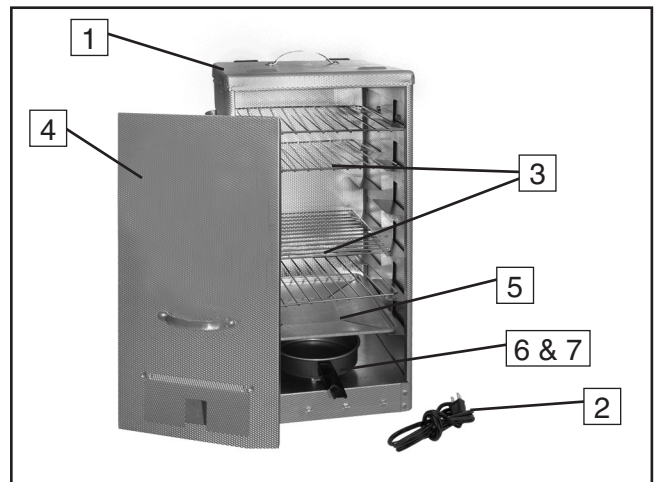


Figure 3. Model H6255 parts breakdown.

!WARNING

Always full cook/dehydrate/smoke all raw meat products. Raw meat harbors bacteria that causes illness or death.

COPYRIGHT © SEPTEMBER, 2004 BY GRIZZLY INDUSTRIAL, INC. REVISED APRIL, 2005.

WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.

#CA6634 PRINTED IN CHINA