

### Model SB1090 37" x 53" Downdraft Table INSTRUCTION SHEET



P.O. Box 2027, Bellingham, WA 98227 U.S.A. PHONE: (360) 734-1540 • www.southbendlathe.com

The Model SB1090 37" x 53" Downdraft Table features heavy-duty steel-frame construction, removable table boards, an internal V-bottom for directing air flow, and two 4" dust ports.

Both table shoulders sit 1½" below the center work table for efficient edge-sanding. Table height can be adjusted from 26" to 43" tall.



Figure 1. SB1090 37" x 53" Downdraft Table.

# WARNING



Incorrect use of this tool can result in death or serious injury. For your own safety, read and understand this entire document before using.



To reduce risk of eye injury or lung damage from dust, always wear safety glasses and a respirator when operating downdraft table!

#### **INJURY HAZARD!**

- Ensure table is properly set up and connected to a dust collection system before using.
- Only use table to collect wood dust.

## **Specifications**

Table Size	$37" \times 53"$
Shoulder Table Size	6" x 53"
Table Height Range	26"–43"
Dust Port Size	4"
Load Capacity (Per Suction Board)	. 40.5 lbs.
Weight	140 lbs.

## **Inventory**

	_	
Ma	in Inventory (Figure 2)	<b>Qty</b>
A.	Table	1
В.	Suction Boards	7
C.	Shoulder Suction Boards	$\dots 2$
D.	Foot Pads	4
E.	Lower Support Legs	4
F.	Upper Support Legs	4
No	t Shown	Qty
•	Flange Bolts 5/16"-18 x 1/2"	32
•	Hex Nuts ½"-13	4
•	Work Stop Nuts	8

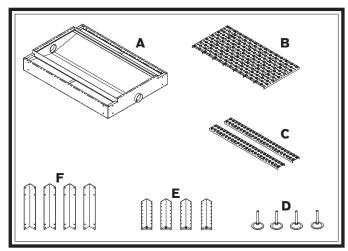


Figure 2. Model SB1090 Inventory.

## **Needed for Setup**

De	Description Qt		
•	Additional Person for Lifting	1	
•	Safety Glasses (for each person)	1	
•	Adjustable Wrench	1	
•	Dust Collection Hose 4"		
•	Hose Clamp 4"		



### **AWARNING**

This downdraft table and its components are very heavy. Get lifting help to move heavy items.

# **Assembly**

The procedure that follows describes the general steps required for assembly.

#### To assemble the downdraft table:

- **1.** Place a piece of cardboard or other protective material on a flat, level, hard floor, then place table face-down on it.
- **2.** Attach each foot pad to each lower support leg using (1) ½"-13 hex nut (see **Figure 3**).

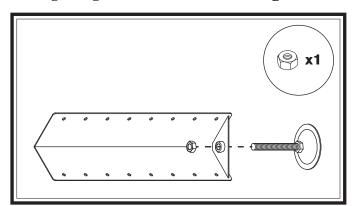


Figure 3. Attaching foot pad to lower support leg.

**3.** Attach each lower support leg to each upper support leg using (4) <sup>5</sup>/<sub>16</sub>"-18 x <sup>1</sup>/<sub>2</sub>" flange bolts (see **Figure 4**).

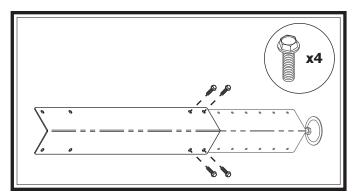


Figure 4. Attaching lower support leg to upper leg.

**4.** Attach each support leg assembly to each corner of table using (4)  $\frac{5}{16}$ "-18 x  $\frac{1}{2}$ " flange bolts (see **Figure 5**).

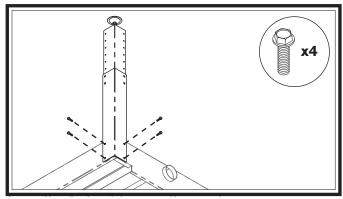



Figure 5. Attaching leg assembly to table.

- **5.** Stand table up, and place in desired position.
- **6.** Place suction boards in table and press grommets in holes, as desired.
- **7.** Connect downdraft table dust port to dust collection system with a 4" dust hose and clamp (see **Figure 6**).



Figure 6. Dust hose connected to dust port.

## Parts Breakdown & List\*

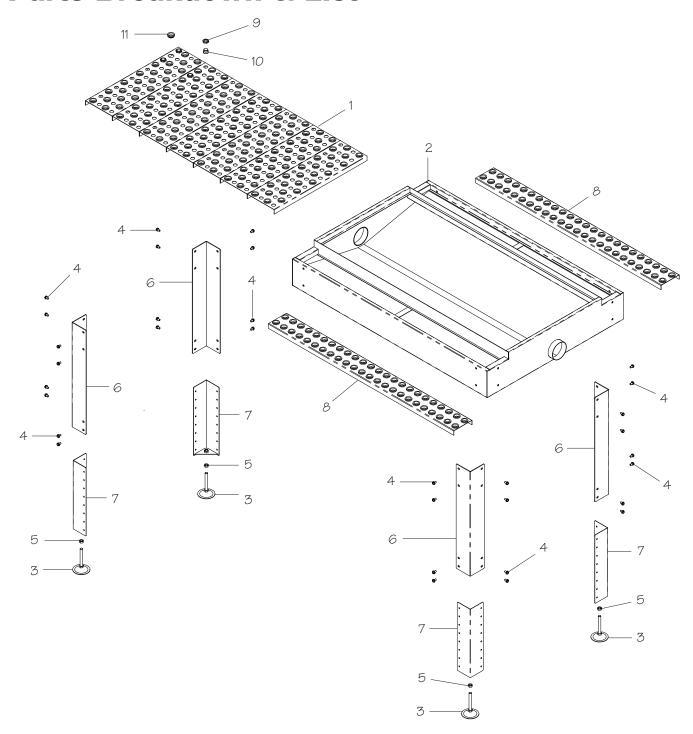

RFF PA	RT #	DESCRIPTION

1	PSB1090001	SUCTION BOARD
2	PSB1090002	TABLE
3	PSB1090003	FOOT PAD 1/2-13 X 3-1/8
4	PSB1090004	FLANGE BOLT 5/16-18 X 1/2
5	PSB1090005	HEX NUT 1/2-13
6	PSB1090006	SUPPORT LEG (UPPER)

#### REF PART # DESCRIPTION

7	PSB1090007	SUPPORT LEG (LOWER)
8	PSB1090008	SHOULDER SUCTION BOARD
9	PSB1090009	WORK STOP NUT
10	PSB1090010	WORK STOP
11	PSB1090011	GROMMET

<sup>\*</sup> Breakdown is for illustration purposes. Not all parts may be available for purchase.

For Models Mfd. Since 04/20

### **Machine Labels**



101 PSB1090101 MODEL NUMBER LABEL	K	Er	PAKI#	DESCRIPTION
	10	01	PSB1090101	MODEL NUMBER LABEL

101	PSB1090101	MODEL NUMBER LABEL
102	PSB1090102	SOUTH BEND NAMEPLATE 125MM
103	PSB1090103	MACHINE ID LABEL

104	PSB1090104	TOUCH-UP PAINT, SB LIGHT BLUE
105	PSB1090105	TOUCH-UP PAINT, SB DARK BLUE

DESCRIPTION

# **AWARNING**

REF PART#

The safety labels provided with your machine are used to make the operator aware of the machine hazards and ways to prevent injury. The owner of this machine MUST maintain the original location and readability of these safety labels. If any label is removed or becomes unreadable, REPLACE that label before using the machine again. Contact South Bend Lathe Co. at (360) 734-1540 or www.southbendlathe.com to order new labels.