


Hydraulic and Chassis Diagram

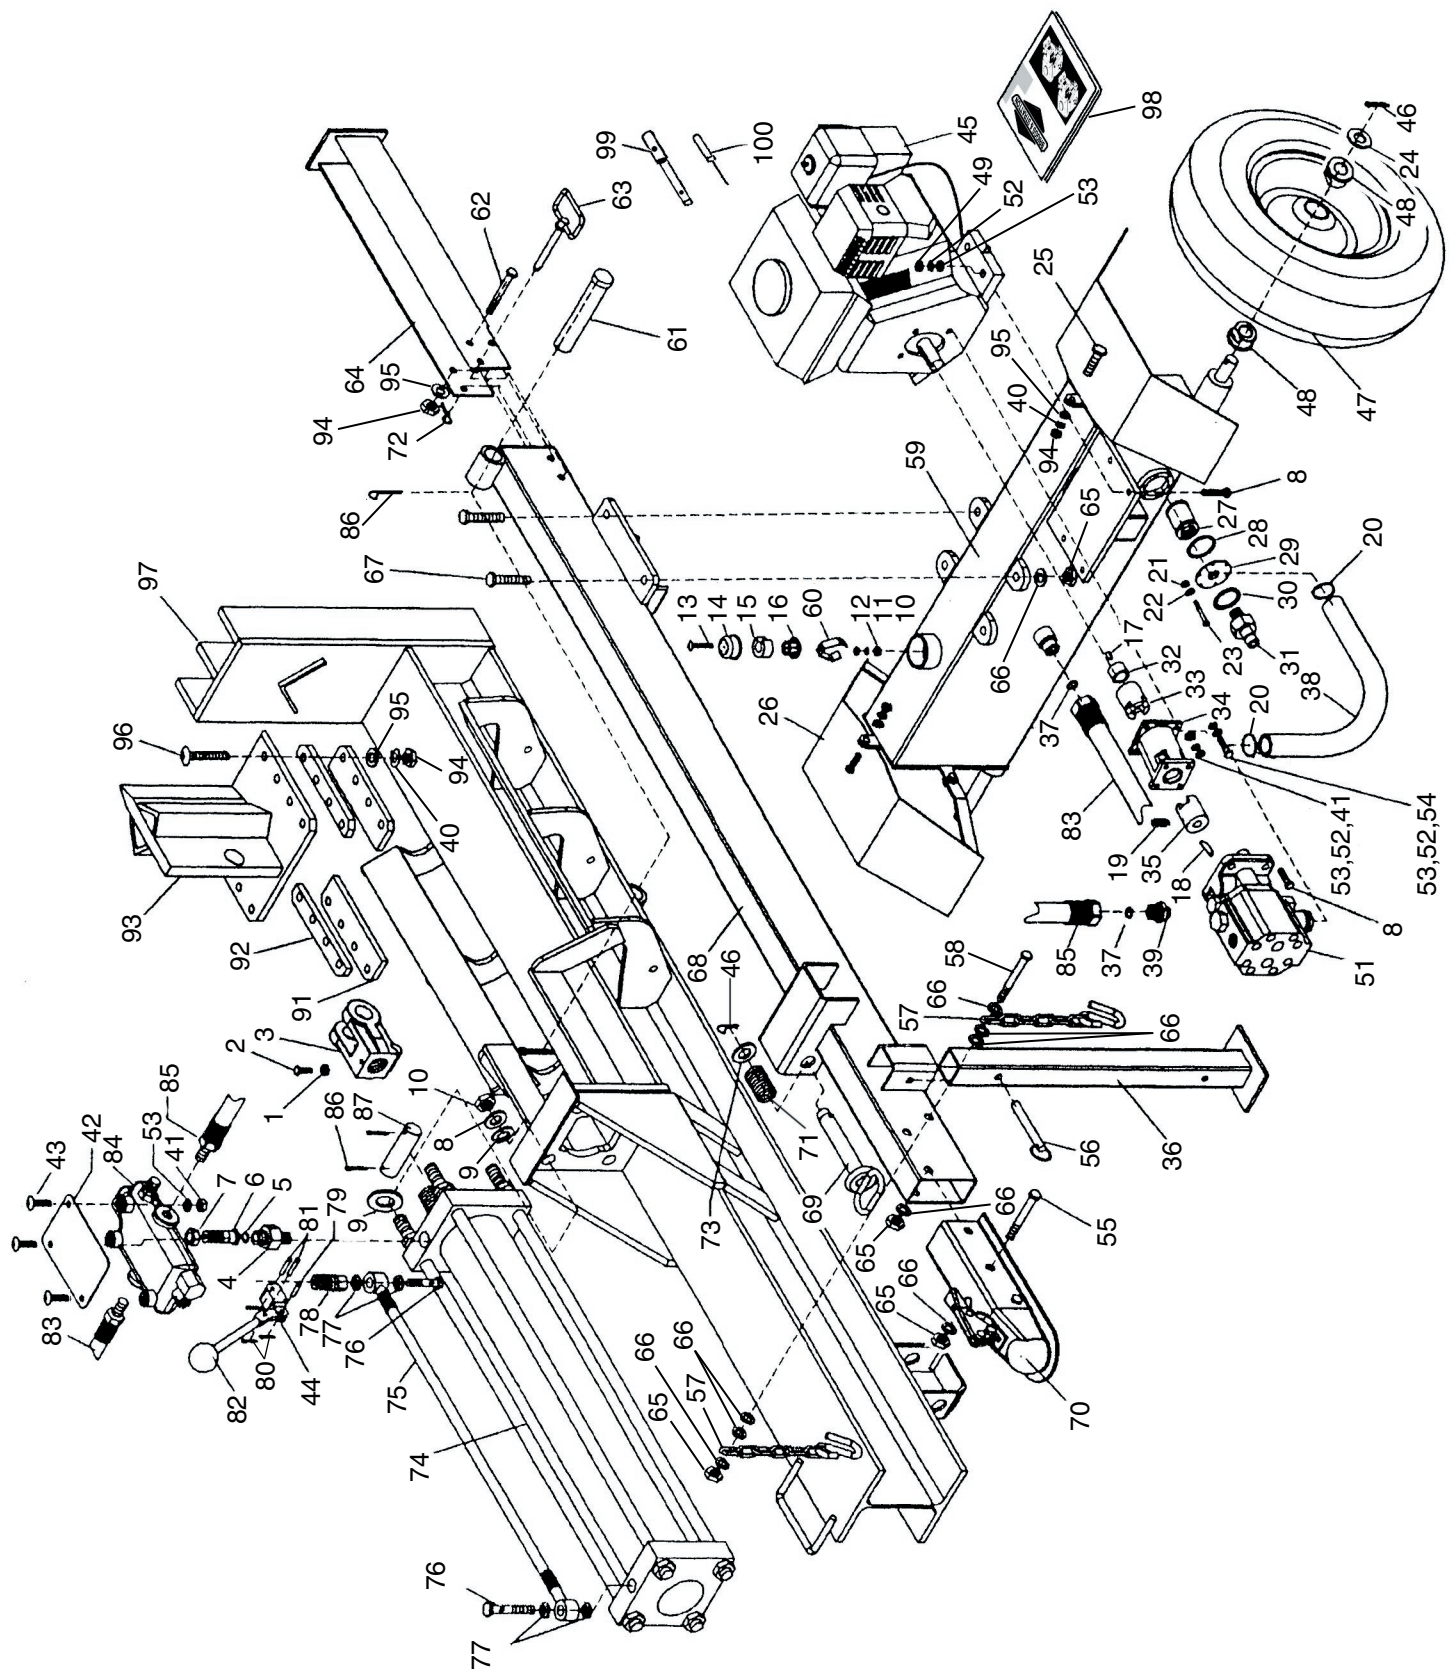


Parts List

REF	PART #	DESCRIPTION
1	PN03M	HEX NUT M8-1.25
2	PB09M	HEX BOLT M8-1.25 X 20
3	P0639003	PISTON ROD CONNECTOR
4	P0639004	FRONT COVER CONNECTOR
5	P0639005	O-RING 2.5 X 15
6	P0639006	VALVE JOINT
7	P0639007	FITTING NUT
8	PB118M	HEX BOLT M8-1.25 X 45
9	P0639009	ADJUSTMENT WASHER
10	PLW02M	LOCK WASHER 4MM
11	PW05M	FLAT WASHER 4MM
12	PN04M	HEX NUT M4-.7
13	PS02M	PHLP HD SCR M4-.7 X 12
14	P0639014	OIL CAP
15	P0639015	SPONGE
16	P0639016	OIL CAP BUSHING
17	P0639017	FLAT KEY
18	P0639018	WOODRUFF KEY
19	PS68M	PHLP HD SCR M6-1 X 10
20	P0639020	2" HOSE CLAMP
21	PW03M	FLAT WASHER 6MM
22	PLW03M	LOCK WASHER 6MM
23	PB123M	HEX BOLT M16-2 X 20
24	PW13M	FLAT WASHER 20MM
25	PB32M	HEX BOLT M10-1.5 X 25
26	P0639026	FENDER
27	P0639027	FILTER
28	P0639028	GASKET
29	P0639029	HUB CAP
31	P0639031	CONNECTOR
32	P0639032	BUSHING
33	P0639033	DRIVE HUB A
34	P0639034	HOUSING
35	P0639035	DRIVEN HUB B
36	P0639036	SUPPORT LEG
37	P0639037	O-RING 2.4 X 11
38	P0639038	SUCTION HOSE
39	P0639039	OUTLET CONNECTOR
40	PLW06M	LOCK WASHER 10MM
41	P0639041	LOCKING HEX NUT M8-1.25
42	P0639042	PLATE
43	P0639043	DOME HD SCR M8-1.25 X 45
44	P0639044	VALVE HANDLE CONNECTOR
45	P0639045	BRIGGS & STRATTON ENGINE 6.5HP
46	P0639046	COTTER PIN 4 X 30
47	P0639047	WHELL W/TIRE (4.80/4.00-8)
48	P0639048	AXLE BUSHING
49	PN03M	HEX NUT M8-1.25
50	PB118M	HEX BOLT M8-1.25 X 45
51	P0639051	HYDRAULIC PUMP

REF	PART #	DESCRIPTION
52	PLW04M	LOCK WASHER 8MM
53	PW01M	FLAT WASHER 8MM
54	PB07M	HEX BOLT M8-1.25 X 25
55	PB141M	HEX BOLT M12-1.75 X 80
56	P0639056	LOCK PIN
57	P0639057	SAFETY CHAIN W/HOOK
58	PB158M	HEX BOLT M12-1.75 X 90
59	P0639059	SUB FRAME
60	P0639060	BREATHER CAP CLIP
61	P0639061	HINGE PIN
62	P0639062	HEX BOLT M10-.1.5 X 75
63	P0639063	HITCH PIN
64	P0639064	REAR SUPPORT LEG
65	P0639065	LOCKING HEX NUT M12-1.75
66	P0639066	FLAT WASHER M12
67	PB35M	HEX BOLT M12-1.75 X 40
68	P0639068	TOW BAR
69	P0639069	HITCH PIN
70	P0639070	2" BALL RECEIVER
71	P0639071	COMPRESSION SPRING
72	P0639072	R-PIN 3 X 55
73	PW13M	FLAT WASHER 20MM
74	P0639074	HYDRAULIC CYLINDER ASSEMBLY
75	P0639075	TRANSFER TUBE
76	P0639076	BOLT CONNECTOR
77	P0639077	SEALWASHER
78	P0639078	VALVE JOINER
79	P0639079	CLEVIS PIN 5 X 18
80	P0639080	ROLL PIN 2 X 10
81	P0639081	CLEVIS PIN 5 X 28
82	P0639082	VALVE HANDLE
83	P0639083	RETURN HOSE
84	P0639084	CONTROL VALVE ASSEMBLY
85	P0639085	PRESSURE HOSE
86	P0639086	COTTER PIN 4 X 40
87	P0639087	WEDGE PIN
88	PN29M	HEX NUT M18-2.5
89	PW18M	FLAT WASHER 18MM
90	PLW12M	LOCK WASHER 18MM
91	P0639091	KEEPER PLATE
92	P0639092	KEEPER SPACER
93	P0639093	WEDGE SLIDE
94	P0639094	HIGH NUT M10-1.5
95	PW06M	FLAT WASHER 12MM
96	P0639096	DOME HEAD BOLT M12-1.5 X 55
97	P0639097	BEAM W/FOOT
97-1	P0639097-1	SAFETY CHAIN
98	P0639098	ENGINE OWNERS MANUAL
99	P0639099	SPARK PLUG SOCKET WRENCH
100	P0639100	SOCKET WRENCH HANDLE



Safety Label Placement & Parts List

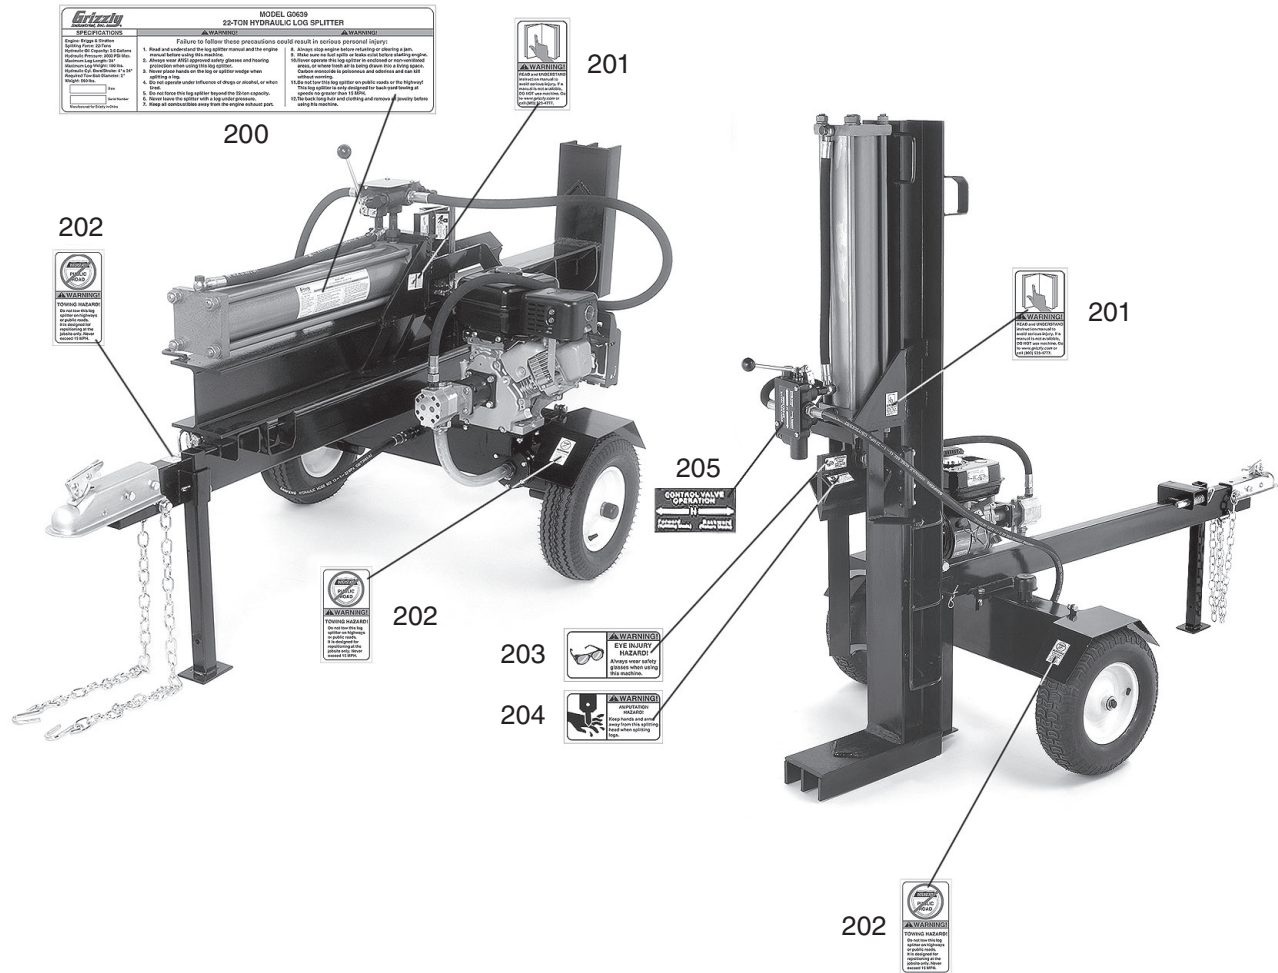

REF	PART #	DESCRIPTION
200	P0639200	MACHINE ID & WARNING LABEL
201	P0639201	READ MANUAL LABEL
202	P0639202	NON ROAD USE LABEL

REF	PART #	DESCRIPTION
203	P0639203	WEAR SAFETY GLASSES LABEL
204	P0639204	CRUSHING HAZARD LABEL
205	P0639205	HYDRAULIC CONTROLS LABEL

WARNING

Safety labels warn about machine hazards and ways to prevent injury. The owner of this machine **MUST** maintain the original location and readability of the labels on the machine. If any label is removed or becomes unreadable, **REPLACE** that label before using the machine again. Contact Grizzly at (800) 523-4777 or www.grizzly.com to order new labels.

