


SECTION 9: PARTS

Main

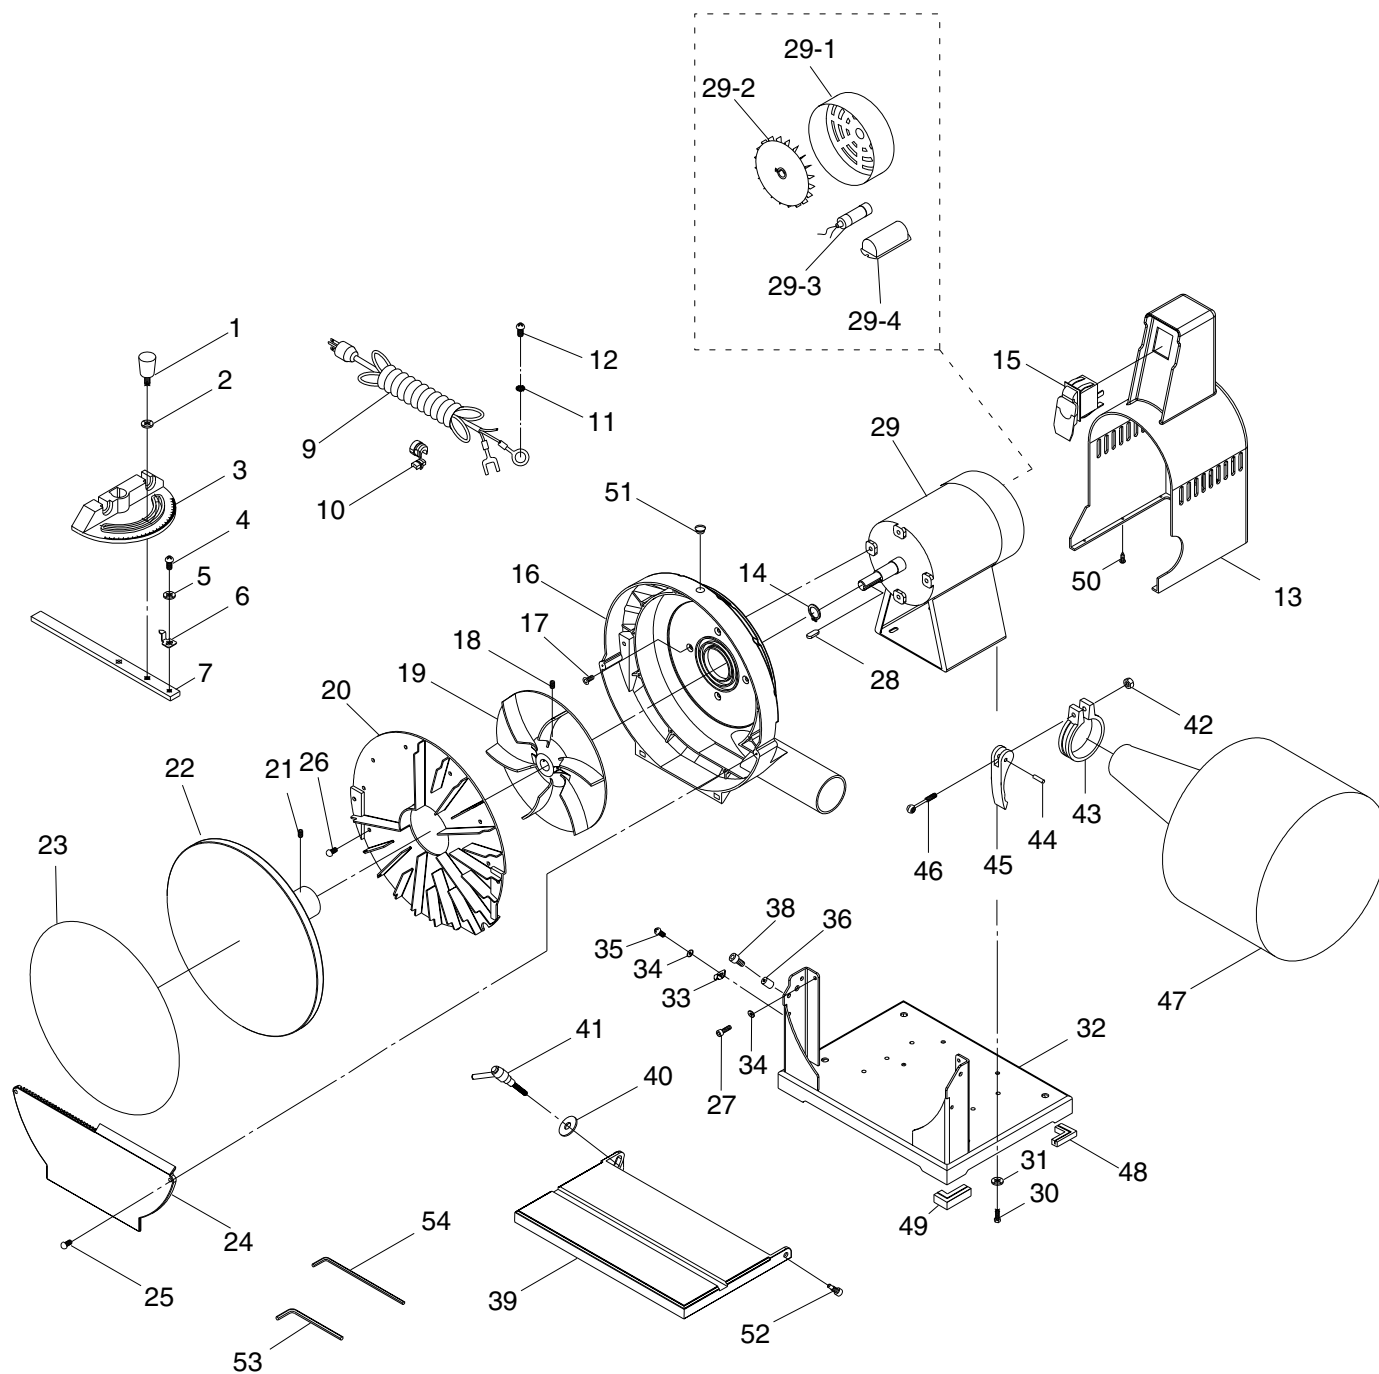


Main Parts List

REF	PART #	DESCRIPTION
1	P0724001	MITER GAUGE KNOB M6-1 X 20
2	PW03M	FLAT WASHER 6MM
3	P0724003	MITER GAUGE BODY
4	PS17M	PHLP HD SCR M4-.7 X 6
5	PW05M	FLAT WASHER 4MM
6	P0724006	POINTER
7	P0724007	MITER BAR
9	P0724009	POWER CORD 18G 3W 72"L 5-15
10	P0724010	STRAIN RELIEF STR SNAP-IN 5/8"
11	PTLW02M	EXT TOOTH WASHER 5MM
12	PS05M	PHLP HD SCR M5-.8 X 8
13	P0724013	MOTOR HOUSING COVER
14	PR18M	EXT RETAINING RING 17MM
15	G8988	PADDLE SWITCH
16	P0724016	DISC HOUSING
17	PCAP26M	CAP SCREW M6-1 X 12
18	PSS31M	SET SCREW M5-.8 X 8
19	P0724019	FAN
20	P0724020	DUST CHUTE
21	PSS16M	SET SCREW M8-1.25 X 10
22	P0724022	DISC 12" ALUMINUM
23	P0724023	ABRASIVE DISC 12" PSA 100G
24	P0724024	DISC COVER
25	PS08M	PHLP HD SCR M5-.8 X 12
26	P0724026	TAP SCREW M4.8 X 12
27	PCAP50M	CAP SCREW M5-.8 X 10
28	PK12M	KEY 5 X 5 X 30
29	P0724029	MOTOR 1/3HP 120V 1725RPM

REF	PART #	DESCRIPTION
29-1	P0724029-1	MOTOR COVER
29-2	P0724029-2	MOTOR FAN
29-3	P0724029-3	R CAPACITOR 25M 250V 1-3/8 X 2-1/2
29-4	P0724029-4	CAPACITOR COVER
30	PB02M	HEX BOLT M6-1 X 12
31	PW03M	FLAT WASHER 6MM
32	P0724032	BASE
33	P0724033	POINTER
34	PW02M	FLAT WASHER 5MM
35	PS19M	PHLP HD SCR M5-.8 X 6
36	P0724036	BUSHING
38	PCAP27M	CAP SCREW M6-1 X 14
39	P0724039	TABLE
40	PW01M	FLAT WASHER 8MM
41	P0724041	LOCK LEVER M8-1.25 X 15
42	PN01M	HEX NUT M6-1
43	P0724043	BAG CLAMP
44	P0724044	SOLID PIN 4.5 X 20MM
45	P0724045	CLAMP HANDLE
46	P0724046	SWING BOLT M6 1 X 50
47	P0724047	DUST COLLECTION BAG
48	P0724048	FOOT RIGHT
49	P0724049	FOOT LEFT
50	PHTEK3M	TAP SCREW M3.5 X 8
51	P0724051	PLASTIC PLUG
52	P0724052	PILOT CAP SCREW M5-.8 X 8, 4 X 5 HEAD
53	PAW04M	HEX WRENCH 4MM
54	PAW05M	HEX WRENCH 5MM



Labels

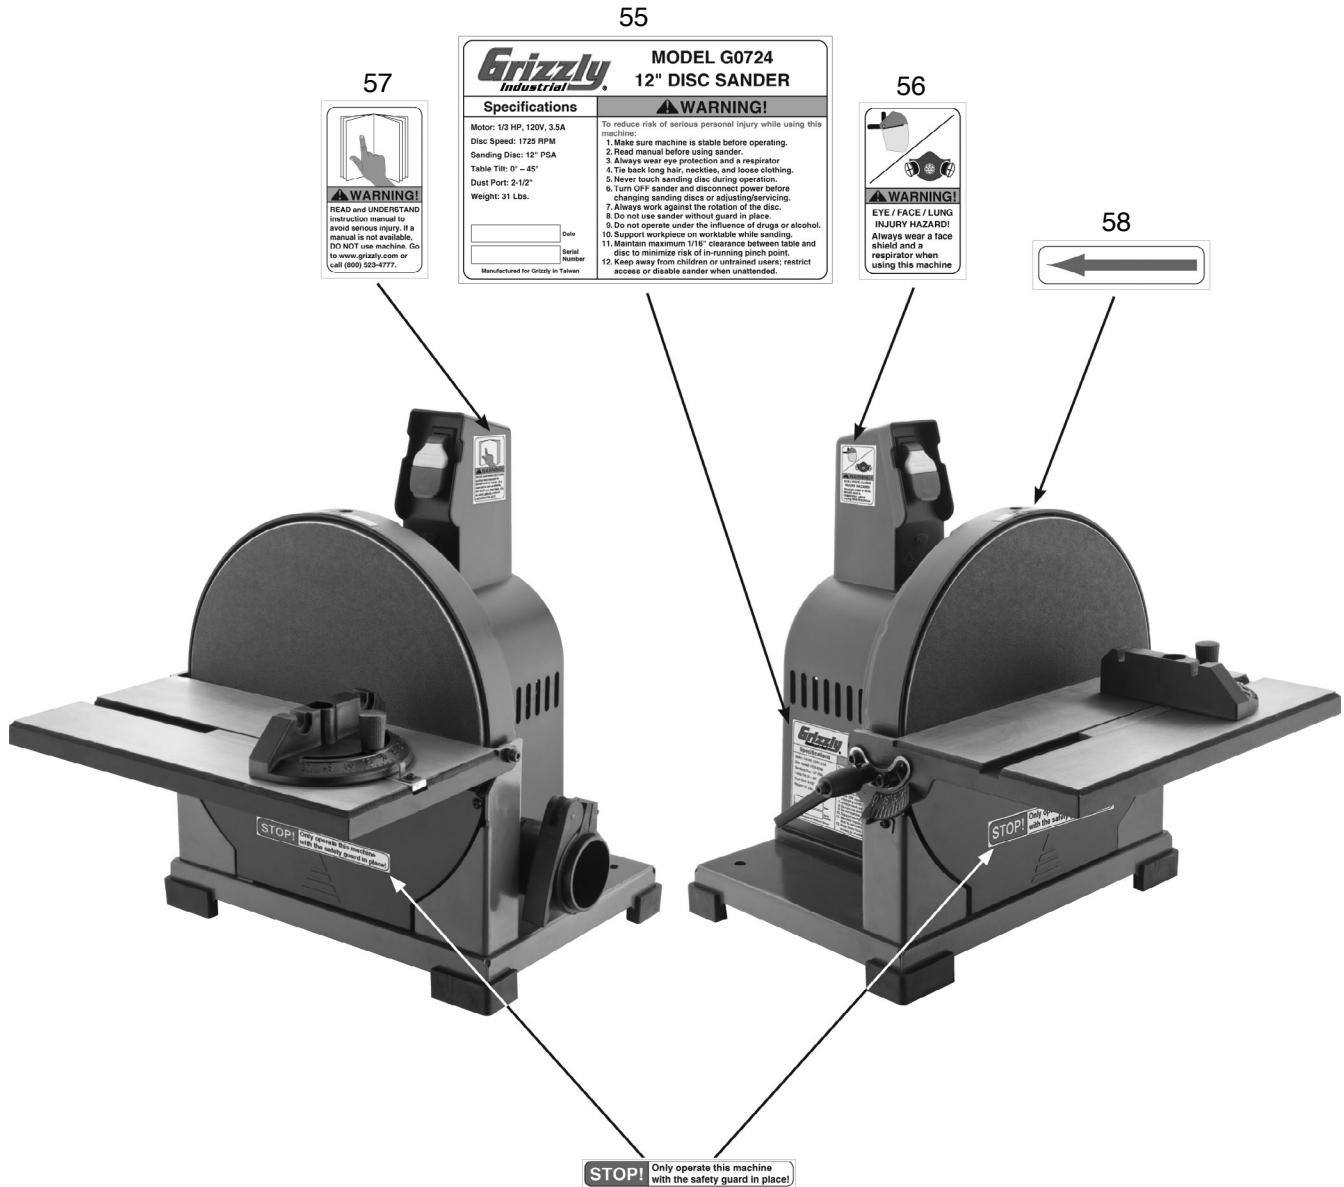

REF	PART #	DESCRIPTION
55	P0724055	MACHINE ID LABEL
56	PLABEL-56	FACE SHIELD RESPIRATOR LABEL
57	PLABEL-12	READ MANUAL LABEL

REF	PART #	DESCRIPTION
58	P0724058	ARROW LABEL
59	P0724059	GUARD LABEL

WARNING

Safety labels help reduce the risk of serious injury caused by machine hazards. If any label comes off or becomes unreadable, the owner of this machine **MUST** replace it in the original location before resuming operations. For replacements, contact (800) 523-4777 or www.grizzly.com.

