

We do our best to stock replacement parts when possible, but we cannot guarantee that all parts shown are available for purchase. Call **(800) 523-4777** or visit **www.grizzly.com/parts** to check for availability.

This diagram is an exploded view of a mechanical assembly, likely a vehicle seat or a similar ergonomic device. It shows the following components and their assembly relationships:

- Main Frame and Base:** Includes the large base plate (100), the central frame (80), and the rear backrest (40). The base plate has mounting points for the seat pan (77) and the rear backrest.
- Seat Pan and Backrest:** The seat pan (77) is mounted on the base. The rear backrest (40) is mounted on the frame. The seat pan has a central opening (103) and a rear support (58).
- Adjustment Mechanisms:** The diagram shows various adjustment points labeled A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z. These points are connected to various adjustment components like levers (104, 105), knobs (101, 102), and actuators (106, 107).
- Control and Power Components:** Includes a control panel (100-1, 100-2, 100-3, 100-4) with buttons (100-1, 100-2, 100-3, 100-4) and a power source (100-5, 100-6).
- Other Components:** Includes a rear support (58), a rear support bracket (60), a rear support plate (78), a rear support plate (79), a rear support plate (34), a rear support plate (31), a rear support plate (56), a rear support plate (59), a rear support plate (62), a rear support plate (61), a rear support plate (66), a rear support plate (69), a rear support plate (72), a rear support plate (73), a rear support plate (74), a rear support plate (75), a rear support plate (76), a rear support plate (77), a rear support plate (78), a rear support plate (79), a rear support plate (80), a rear support plate (81), a rear support plate (82), a rear support plate (83), a rear support plate (84), a rear support plate (85), a rear support plate (86), a rear support plate (87), a rear support plate (88), a rear support plate (89), a rear support plate (90), a rear support plate (91), a rear support plate (92), a rear support plate (93), a rear support plate (94), a rear support plate (95), a rear support plate (96), a rear support plate (97), a rear support plate (98), a rear support plate (99), a rear support plate (100), a rear support plate (101), a rear support plate (102), a rear support plate (103), a rear support plate (104), a rear support plate (105), a rear support plate (106), a rear support plate (107), a rear support plate (108), a rear support plate (109), a rear support plate (110), a rear support plate (111), a rear support plate (112), a rear support plate (113), a rear support plate (114), a rear support plate (115), a rear support plate (116), a rear support plate (117), a rear support plate (118), a rear support plate (119), a rear support plate (120).

Main Parts List

REF	PART #	DESCRIPTION
1	P0938001	COMPRESSION SPRING 1.2 X 13.8 X 40
2	P0938002	FLAT WASHER 10MM
3	P0938003	BLADE 5" PLAIN-END 18TPI
4	P0938004	BLADE 5" PIN-END 15TPI
5	P0938005	FOOT PAD
6	P0938006	BELLOWS
7	P0938007	PLUG HOUSING
8	P0938008	PVC TUBE
9	P0938009	KNOB BOLT M6-1 X 13, D25, WING
10	P0938010	HEX WRENCH 3MM
11	P0938011	FLAT WASHER 6MM
12	P0938012	FENDER WASHER 6MM
13	P0938013	FLAT WASHER 4MM
14	P0938014	EXT TOOTH WASHER 5MM
15	P0938015	WAVY WASHER 6MM
16	P0938016	WAVY WASHER 8MM
17	P0938017	ROLL PIN 3 X 16
18	P0938018	ROLL PIN 5 X 20
19	P0938019	ROLL PIN 3 X 15
20	P0938020	O-RING 4.8 X 1.9 P5
21	P0938021	HEX BOLT M6-1 X 30
22	P0938022	CAP SCREW M5-.8 X 20
23	P0938023	CAP SCREW M6-1 X 20
24	P0938024	CAP SCREW M6-1 X 35
25	P0938025	SET SCREW M8-1.25 X 8
26	P0938026	SET SCREW M4-.7 X 6
27	P0938027	FLANGE BOLT M8-1.25 X 20
28	P0938028	CAP SCREW M6-1 X 16
29	P0938029	CAP SCREW M5-.8 X 20
30	P0938030	FLAT HD SCR M5-.8 X 12
31	P0938031	PHLP HD SCR M4-.7 X 6
32	P0938032	PHLP HD SCR M5-.8 X 8
33	P0938033	PHLP HD SCR M5-.8 X 12
34	P0938034	FLANGE SCREW M5-.8 X 8
35	P0938035	FLANGE SCREW M6-1 X 10
36	P0938036	TAP SCREW M4 X 20
37	P0938037	TAP SCREW M5 X 12
38	P0938038	PHLP HD SCR M5-.8 X 12
39	P0938039	PHLP HD SCR M5-.8 X 16
40	P0938040	PHLP HD SCR M6-1 X 16
41	P0938041	PHLP HD SCR M5-.8 X 6
42	P0938042	HEX NUT M6-1
43	P0938043	LOCK NUT M5-.8
44	P0938044	HEX NUT M6-1
45	P0938045	TERMINAL BLOCK PA9
46	P0938046	LOCKING CABLE TIE
47	P0938047	TAP SCREW M3 X 15
48	P0938048	TAP SCREW M5 X 15
49	P0938049	CAP SCREW M4-.7 X 12
50	P0938050	PHLP HD SCR M5-.8 X 25
51	P0938051	TENSION SPACER 6 X 18 X 1
52	P0938052	BRACKET STOP PLATE
53	P0938053	ACORN NUT M6-1

REF	PART #	DESCRIPTION
54	P0938054	SQUARE NUT M6-1
55	P0938055	ROLL PIN 6 X 14
56	P0938056	TURNTABLE
57	P0938057	ROCKER SWITCH TTC TR01 10A
58	P0938058	FLAT HD TAP SCREW M5 X 16
59	P0938059	TURNTABLE COVER
60	P0938060	PLATE COVER
61	P0938061	GUIDE HOLDER
62	P0938062	BEVEL ANGLE COVER
63	P0938063	WIRE ROPE ASSEMBLY
64	P0938064	PHLP HD SCR M5-.8 X 10
65	P0938065	FLANGE SCREW M6-1 X 12
66	P0938066	PHLP HD SCR M5-.8 X 12
67	P0938067	ROCKER SWITCH KEDU HY17 8A
68	P0938068	TENSION HANDLE
69	P0938069	PLUNGER HANDLE
70	P0938070	FOLLOWER PLATE
71	P0938071	BASE, REAR
72	P0938072	BASE, FRONT
73	P0938073	ROCKER ARM, LOWER
74	P0938074	ROCKER ARM, UPPER
75	P0938075	SWITCH BOX COVER
76	P0938076	SWITCH BOX HOUSING
77	P0938077	TABLE
78	P0938078	BLADE STORAGE TRAY
79	P0938079	BLADE STORAGE BRACKET
80	P0938080	BODY ASSEMBLY
81	P0938081	MOTOR COVER
82	P0938082	TENSION ROD
83	P0938083	SIDE COVER
84	P0938084	DUST PORT
85	P0938085	SWITCH BOX SIDE COVER
86	P0938086	ON/OFF BUTTON COVER
87	P0938087	BEVEL ANGLE SCALE
88	P0938088	UPPER SIDE COVER
89	P0938089	TENSION HANDLE
90	P0938090	ANCHOR BOLT
91	P0938091	LOCKING ROD
92	P0938092	GUIDE BLOCK
93	P0938093	PIVOT SHAFT
94	P0938094	SPEED DIAL KNOB
95	P0938095	RETAINING BRACKET
96	P0938096	LINKAGE BAR
97	P0938097	ECCENTRIC COUNTERWEIGHT
98	P0938098	TRUNNION BRACKET
99	P0938099	RIGID AIR HOSE W/NOZZLE
100	P0938100	MOTOR 1/9 HP 120V 1-PH
101-1	P0938100-1	POWER CORD 18G 3W 72" 5-15P
101-2	P0938100-2	CARBON BRUSH
101-3	P0938100-3	BRUSH HOLDER
101-4	P0938100-4	BRUSH COVER
101	P0938101	LED LAMP 120V 10W
102	P0938102	CIRCUIT BOARD XK94V-0




Main Parts List (Cont.)

REF	PART #	DESCRIPTION
103	P0938103	TABLE INSERT
104	P0938104	WIRE ROPE 120MM (BLACK)
105	P0938105	WIRE ROPE 120MM (WHITE)
106	P0938106	POTENTIOMETER
107	P0938107	BLADE HOLDER ASSEMBLY
108	P0938108	BEARING SEAT ASSEMBLY
109	P0938109	ROLL PIN 6 X 23

REF	PART #	DESCRIPTION
110	P0938110	SUPPORT ROD
111	P0938111	ANCHOR PLATE
112	P0938112	TAP SCREW M3 X 8
113	P0938113	PA HOSE 12 X 15 X 200
114	P0938114	TORSION SPRING 1.4 X 33 X 28
115	P0938115	COVER, LEFT
116	P0938116	COVER, RIGHT



Stand

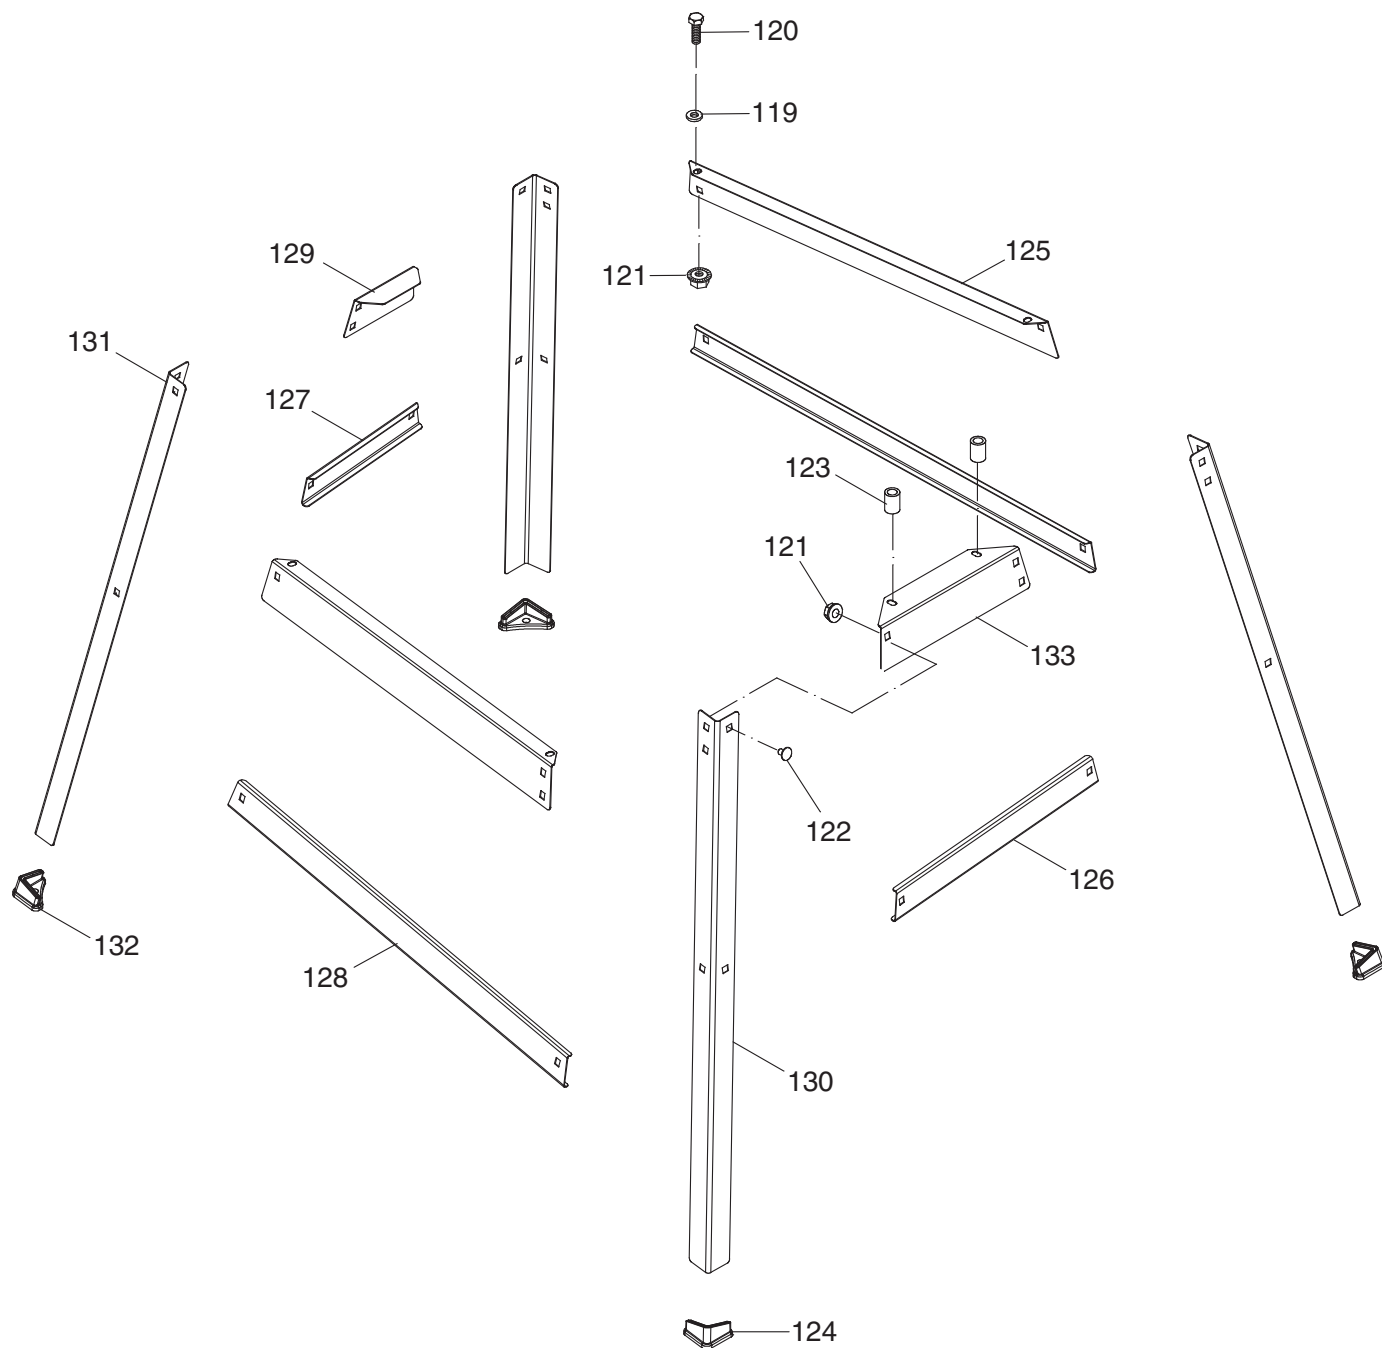


REF	PART #	DESCRIPTION
119	P0938119	FLAT WASHER 8MM
120	P0938120	HEX BOLT M8-1.25 X 45
121	P0938121	FLANGE NUT M8-1.25
122	P0938122	CARRIAGE BOLT M8-1.25 X 12
123	P0938123	SPACER 9 X 14 X 20
124	P0938124	FOOT, FRONT
125	P0938125	SUPPORT BRACKET, UPPER (SIDE)
126	P0938126	SUPPORT BRACKET, LOWER (FRONT)

REF	PART #	DESCRIPTION
127	P0938127	SUPPORT BRACKET, LOWER (REAR)
128	P0938128	SUPPORT BRACKET, LOWER (SIDE)
129	P0938129	SUPPORT BRACKET, UPPER (REAR)
130	P0938130	LEG, FRONT
131	P0938131	LEG, REAR
132	P0938132	FOOT, REAR
133	P0938133	SUPPORT BRACKET, UPPER (FRONT)



Labels & Cosmetics

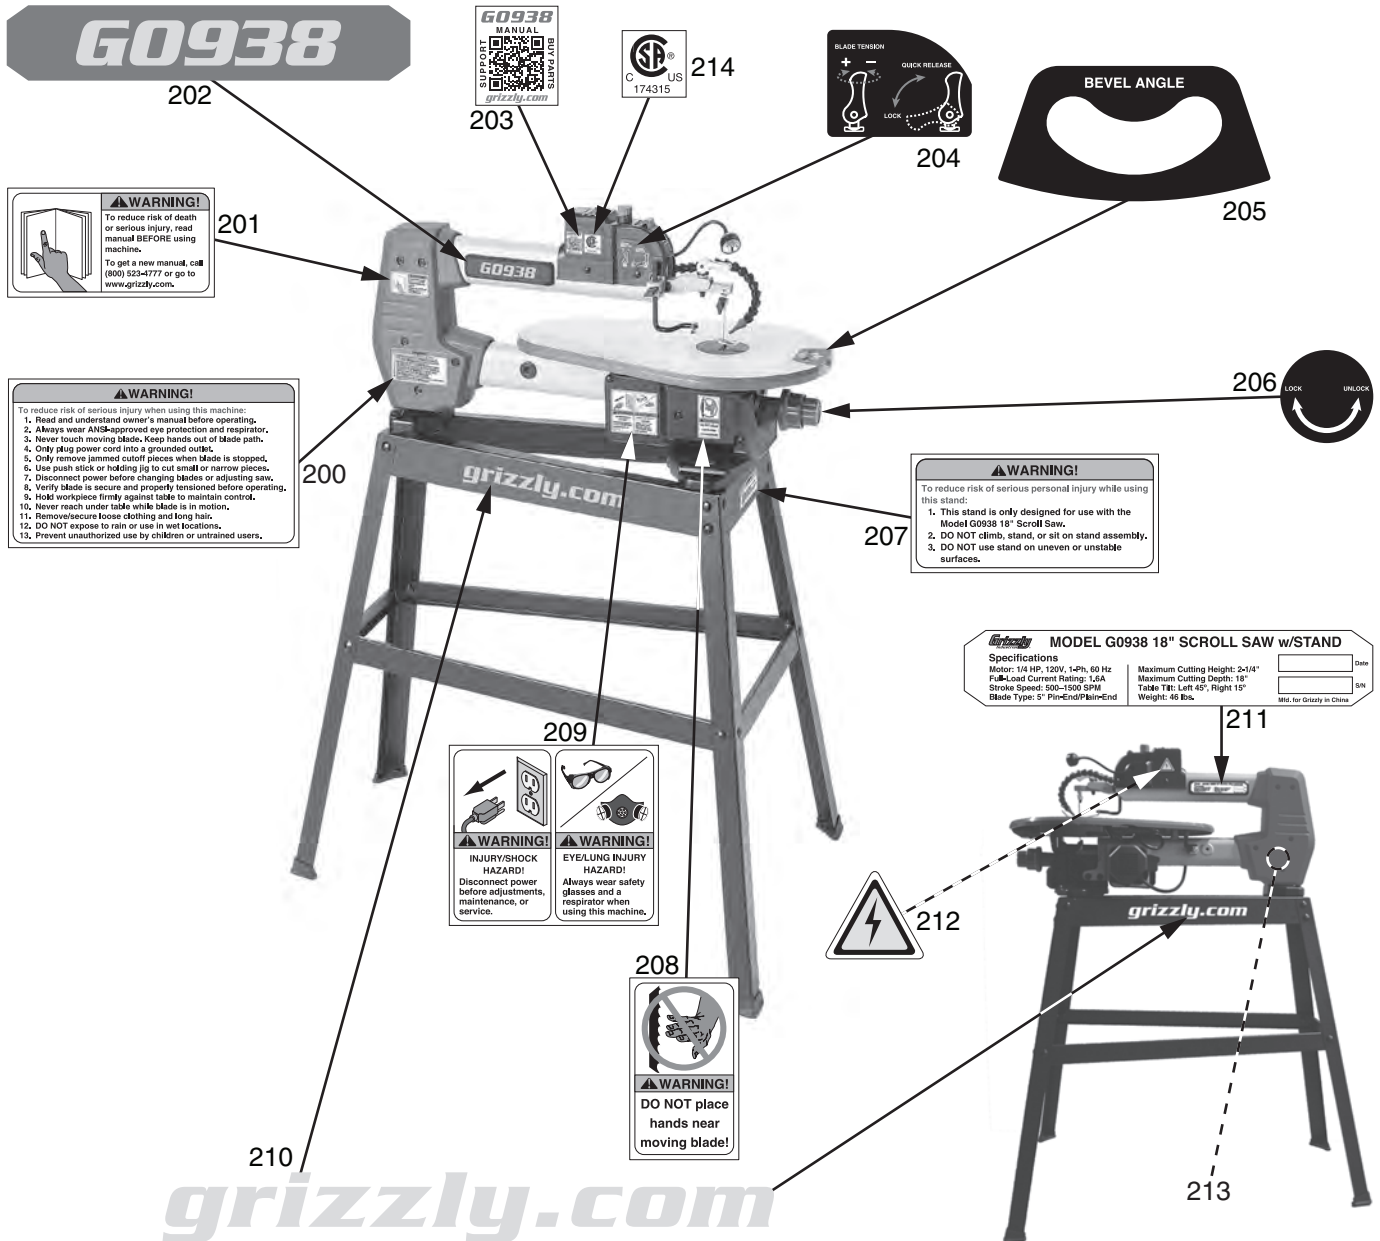

REF	PART #	DESCRIPTION
200	P0938200	MACHINE WARNING LABEL
201	P0938201	READ MANUAL LABEL
202	P0938202	MODEL NUMBER LABEL
203	P0938203	QR CODE LABEL
204	P0938204	BLADE TENSION LABEL
205	P0938205	BEVEL ANGLE LABEL
206	P0938206	TABLE LOCK LABEL

REF	PART #	DESCRIPTION
208	P0938208	BLADE WARNING LABEL
209	P0938209	COMBO WARNING LABEL
210	P0938210	GRIZZLY.COM LABEL
211	P0938211	MACHINE ID LABEL
212	P0938212	ELECTRICITY LABEL
213	P0938213	TOUCH-UP PAINT, GRIZZLY GREEN
214	P0938214	CSA LABEL

