




20" BANDSAW

MODEL G1258

PARTS LIST

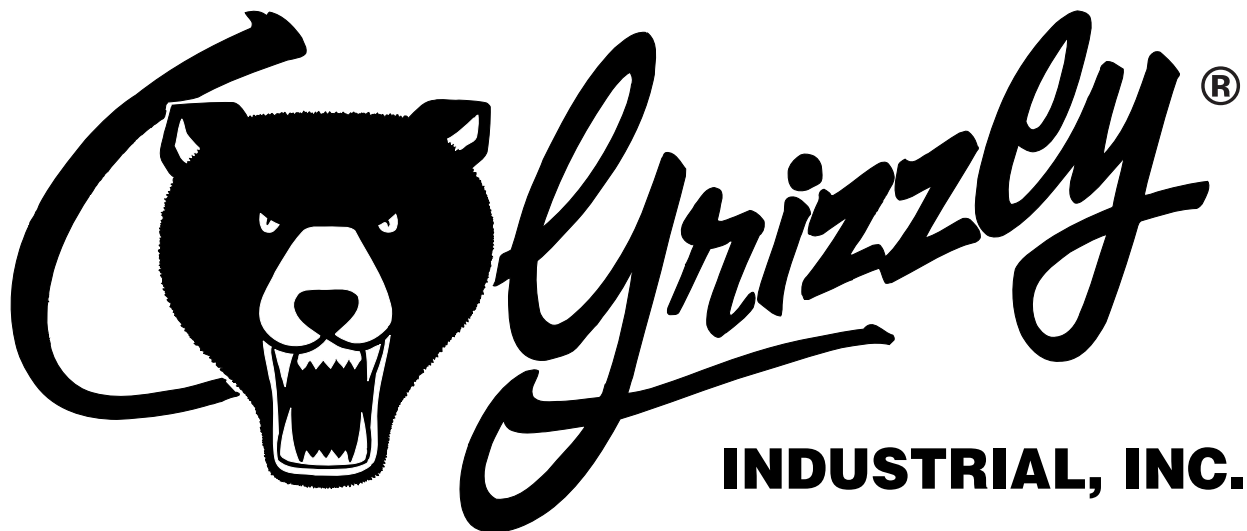

COPYRIGHT © 1992 BY GRIZZLY INDUSTRIAL, INC.


WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.

FEBRUARY, 1999 PRINTED IN USA

PARTS LIST DISCLAIMER

THIS PARTS LIST AND DRAWINGS REPRESENT THE CONFIGURATION OF THE MACHINE AS IT IS CURRENTLY BEING SHIPPED. THE MACHINE CONFIGURATION CAN CHANGE AS PRODUCT IMPROVEMENTS ARE INCORPORATED. IF YOU OWN AN EARLIER VERSION OF THE MACHINE, THIS PARTS LIST MAY NOT DEPICT YOUR MACHINE EXACTLY. CONTACT CUSTOMER SERVICE IF YOU HAVE ANY QUESTIONS ABOUT PART DIFFERENCES. PREVIOUS PARTS LIST VERSIONS ARE NOT AVAILABLE ONLINE.

PARTS DIAGRAM AND PARTS LIST

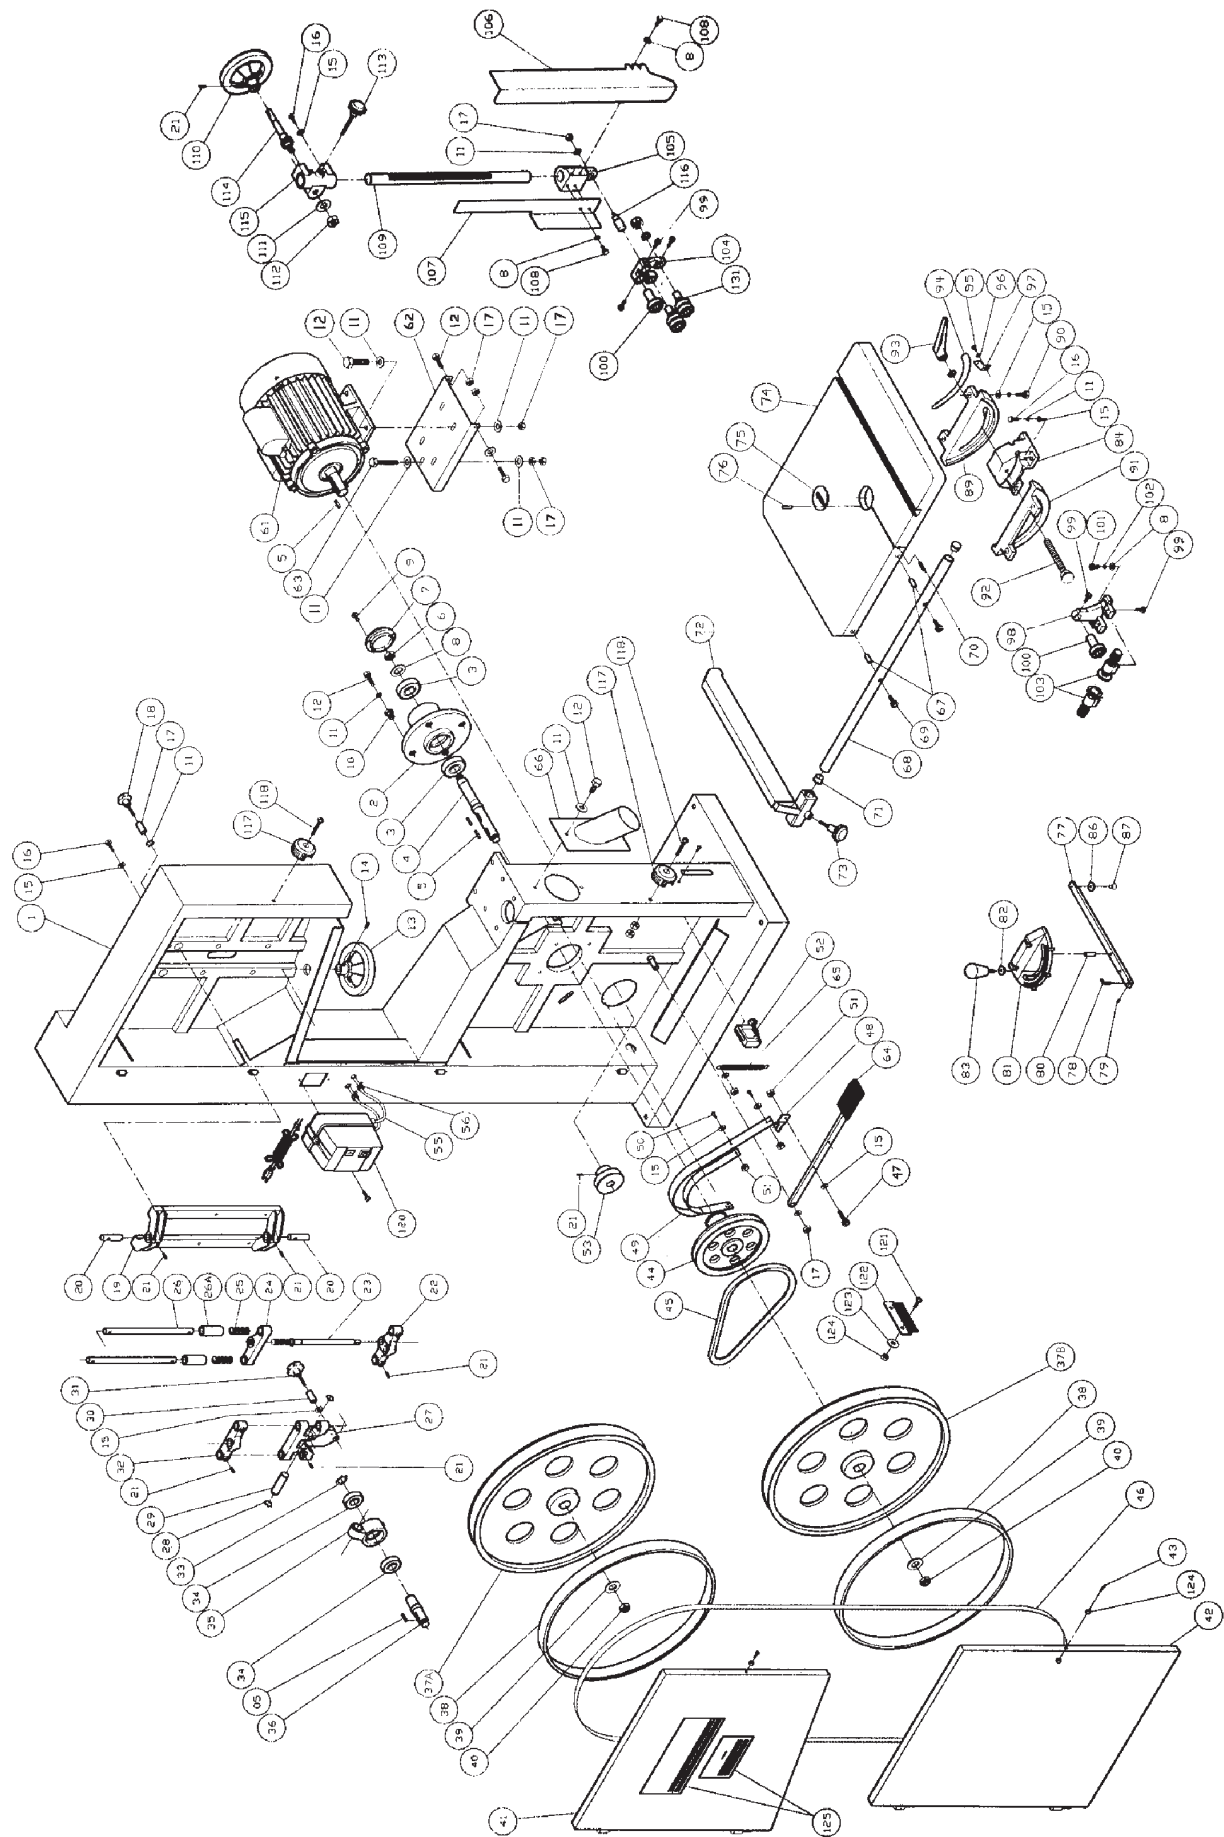

REF	PART #	DESCRIPTION
01	P1258001	BODY
02	P1258002	BEARING BASE
03	P6305	BEARING 6305-2RS
04	P1258004	SHAFT
05	PK28M	KEY 7 X 7 X 29
06	PN03	HEX NUT 3/4"-16
07	P1258007	BEARING COVER
08	P1258008	WASHER
09	P1258009	PHILLIPS HEAD SCREW
10	P1258010	COVER
11	P1258011	WASHER
12	PB18	HEX BOLT 3/8"-16 X 1"
13	P1258013	ADJUST WHEEL
14	PSS03	SETSCREW 1/4"-20 X 3/8"
15	PW02	FLAT WASHER 3/8"
16	PSB14	CAP SCREW 3/8"-16 X 1"
17	PN02	HEX NUT 5/16"-18
18	P1258018	KNOB 5/16"-18
19	P1258019	WHEEL BRACKET
20	P1258020	BRACKET SHAFT
21	PSS02	SET SCREW 5/16"-18 X 3/8"
22	P1258022	ADJUST BRACKET
23	P1258023	ADJUST SCREW
24	P1258024	ELEVATOR BRACKET
25	P1258025	SPRING
26	P1258026	GUIDE SPINDLE
26A	P1258026A	BUSHING
27	P1258027	GUIDE BRACKET
28	PR09M	SNAP RING 20MM
29	P1258029	LEVER SHAFT
30	PN08	HEX NUT 3/8"-16
31	P1010079	TENSION KNOB
32	P1258032	UPPER ADJUST BRACKET
33	PR11M	SNAP RING 25MM
34	P6205	BEARING 6205-2RS
35	P1258035	BEARING BASE
36	P1258036	UPPER WHEEL SHAFT
37A	P1258037A	UPPER WHEEL ALUMINUM
37B	P1258037B	LOWER WHEEL CAST IRON
38	P1258038	RUBBER TIRE
39	P1258039	WASHER 3/4"
40	PN03	HEX NUT 3/4"-16
41	P1258041	UPPER GUARD
41A	P1258041A	HINGE PINS
42	P1258042	LOWER GUARD
43	P1258043	PHILLIPS HEAD SCREW
44	P1258044	BRAKE WHEEL
45	PVB36	V-BELT B-36
46	P1258046	SEE CATALOG
47	P1258047	HEX BOLT
48	P1258048	BRAKE BELT LOCKING
49	P1258049	BRAKE BELT
50	P1258050	RIVET
51	P1258051	HEX NUT
52	P1258052	MICRO SWITCH
53	P1258053	MOTOR PULLEY
55	P1258055	POWER CORD
56	P1258056	MOTOR CORD
61	P1258061	MOTOR
62	P1258062	MOTOR PLATE

REF	PART #	DESCRIPTION
63	P1258063	HEX BOLT
64	P1258064	BRAKE PEDAL
65	P1258065	SPRING
66	P1258066	DUST CHUTE
67	P1258067	BUSH
68	P1258068	FENCE GUIDE RAIL
69	PSB12	CAP SCREW 5/16"-18 X 2 1/2"
70	P1258070	SETSCREW
71	P1258071	RAIL PLUG
72	P1258072	FENCE
73	P1258073	LOCKING KNOB
74	P1258074	WORKING TABLE
75	P1012044	TABLE INSERT
76	P1258076	SPRING PIN
77	P1258077	MITER BAR
78	P1258078	POINTER
79	P1258079	PAN SCREW 3/16" X 3/8"
80	P1258080	PIN
81	P1258081	MITER BODY
82	P1258082	WASHER
83	P1258083	LOCK HANDLE
84	P1258084	TABLE BRACKET
86	P1025086	SPECIAL WASHER
87	P1258087	FLAT HEAD SCREW
89	P1258089	TRUNNION
90	P1258090	HEX BOLT
91	P1258091	TRUNNION
92	P1258092	HEX BOLT
93	P1258093	LOCK HANDLE
94	P1258094	SCALE
95	P1258095	SCREW
96	P1258096	WASHER
97	P1258097	POINTER
98	P1258098	BRACKET
99	P1258099	CAP SCREW
100	P1258100	ADJUST GUIDE SHAFT
101	P1258101	HEX BOLT
102	P1258102	WASHER
103	P1258103	BLADE GUIDE
104	P1258104	BRACKET
105	P1258105	GUIDE BAR BRACKET
106	P1258106	BLADE GUARD
107	P1258107	INNER GUARD
108	PB02	HEX BOLT
109	P1258109	GUIDE BAR
110	P1025048	HAND WHEEL
111	P1258111	WASHER
112	P1258112	SNAP RING 12MM
113	P1258113	KNOB
114	P1258114	GEAR SHAFT
115	P1258115	GEAR BRACKET
116	P1258116	SHAFT
117	P1258117	KNOB WHEEL
118	P1258118	PHILLIPS HEAD SCREW
120	P1258120	SWITCH
121	P1258121	PHILLIPS HEAD SCREW
122	P1258122	BRUSH
123	P1258123	WASHER
124	P1258124	HEX NUT
125	P1258125	LABEL
131	P1258131	BEARING GUIDE