

G3622 Breakdown



G3622 Parts List

REF	PART #	DESCRIPTION
1	PN38	HEX NUT 7/8"-9
2	P3622002	COMPLETE SPACER SET
2-1	P3622002-1	SPACER 7/8" x 1"
2-2	P3622002-2	SPACER 7/8" X 1-1/2"
2-3	P3622002-3	SPACER 7/8" X 2"
3	PS06	PHLP HD SCR 10-24 X 3/8
4	P3622004	SWITCH 1HP 220V 1PH 60HZ
5	PB09	HEX BOLT 5/16-18 X 1/2
6	P3622006	SWITCH SUPPORT
7	PB09	HEX BOLT 5/16-18 X 1/2
8	P3622008	WRENCH 1-3/8
9	PN39	HEX NUT 7/8"-9 LH

REF	PART #	DESCRIPTION
10	P3622010	MOTOR 1HP, 200V, 1-PH
11	PB22	HEX BOLT 5/16-18 X 1-3/4
12	PW07	FLAT WASHER 5/16
13	PLW01	LOCK WASHER 5/16
14	PN02	HEX NUT 5/16"-18
15	G4789	STAND (OPTIONAL)
17	P3622017	S CAPACITOR 20M 300V 1-3/4 x 3-3/4
18	P3622018	MACHINE ID LABEL
19	P3622019	SAFETY WARNING LABELS
20	P3622020	ELECTRICITY LABEL 0.7W X 0.6H
21	P3622021	POWER CORD 12AWG x 3C
22	G9987	SMALL GRIZZLY NAMEPLATE

WARNING

Safety labels warn about machine hazards and ways to prevent injury. The owner of this machine **MUST** maintain the original location and readability of the labels on the machine. If any label is removed or becomes unreadable, **REPLACE** that label before using the machine again. Contact Grizzly at (800) 523-4777 or www.grizzly.com to order new labels.

