


G3623 Breakdown

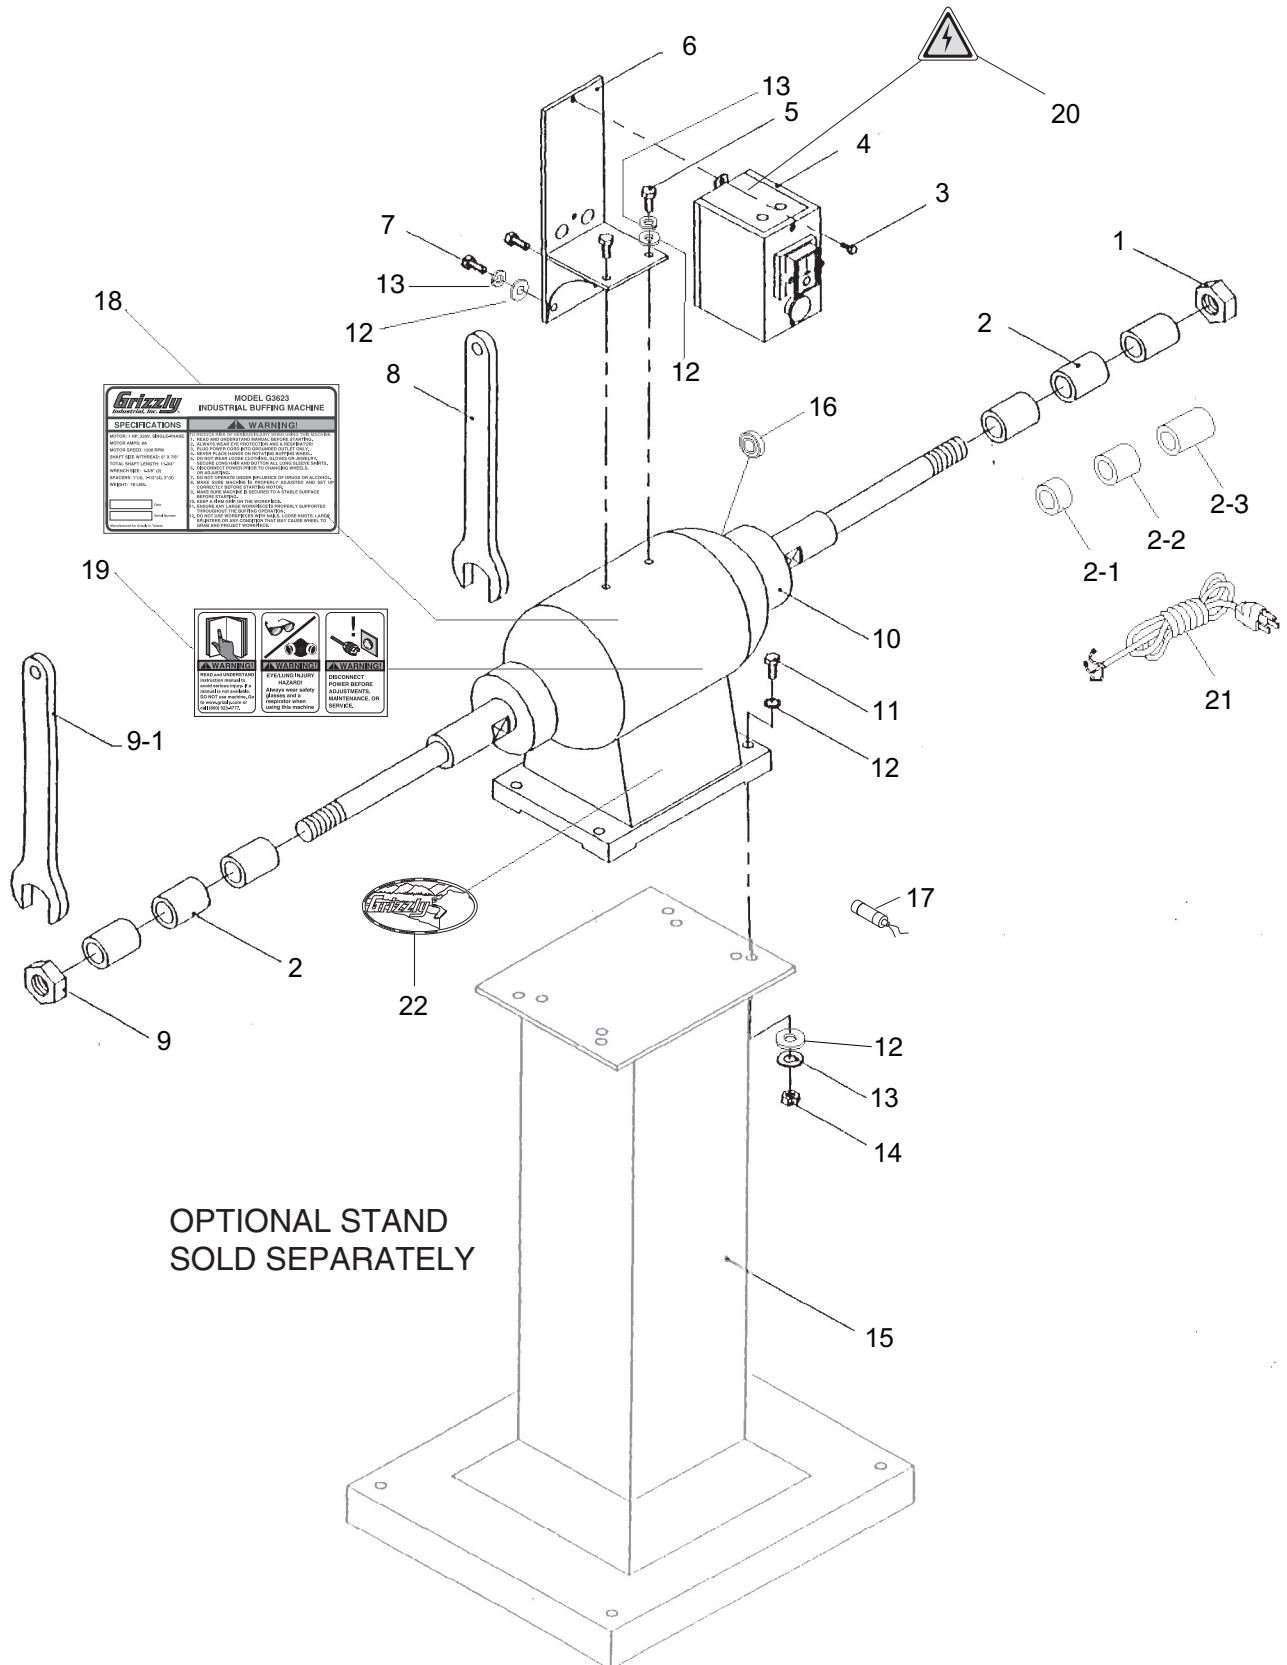

G3623 Parts List

REF	PART #	DESCRIPTION
1	PN36	HEX NUT 1-1/4"-7
2	P3623002	COMPLETE SPACER SET
2-1	P3623002-1	SPACER 1-1/4" X 1"
2-2	P3623002-2	SPACER 1-1/4" X 1-1/2"
2-3	P3623002-3	SPACER 1-1/4" X 2"
3	PS06	PHLP HD SCR 10-24 X 3/8
4	P3623004	SWITCH MS-11-3PV (2HP-1PH)
5	PB07	HEX BOLT 5/16-18 X 3/4
6	P3623006	SWITCH SUPPORT
7	PB07	HEX BOLT 5/16-18 X 3/4
8	P3623008	WRENCH 1-1/2"
9	PN37	HEX NUT 1-1/4"-7 LH
9-1	PWR2	WRENCH 2"

REF	PART #	DESCRIPTION
10	P3623010	MOTOR 2HP, 220V, 1-PH
11	PB06	HEX BOLT 5/16-18 X 2
12	PW07	FLAT WASHER 5/16
13	PLW01	LOCK WASHER 5/16
14	PN02	HEX NUT 5/16"-18
15	G4789	STAND (OPTIONAL)
16	P6209	BALL BEARING 6209ZZ
17	P3623017	S CAPACITOR 50M 300V 1-3/4 X 3-3/4
18	P3623018	MACHINE ID LABEL
19	P3622019	SAFETY WARNING LABELS
20	P3622020	ELECTRICITY LABEL 0.7W X 0.6H
21	P3623021	POWER CORD 12AWG x 3C
22	G9987	SMALL GRIZZLY NAMEPLATE

WARNING

Safety labels warn about machine hazards and ways to prevent injury. The owner of this machine **MUST** maintain the original location and readability of the labels on the machine. If any label is removed or becomes unreadable, **REPLACE** that label before using the machine again. Contact Grizzly at (800) 523-4777 or www.grizzly.com to order new labels.

