


G8122 Parts Breakdown and List

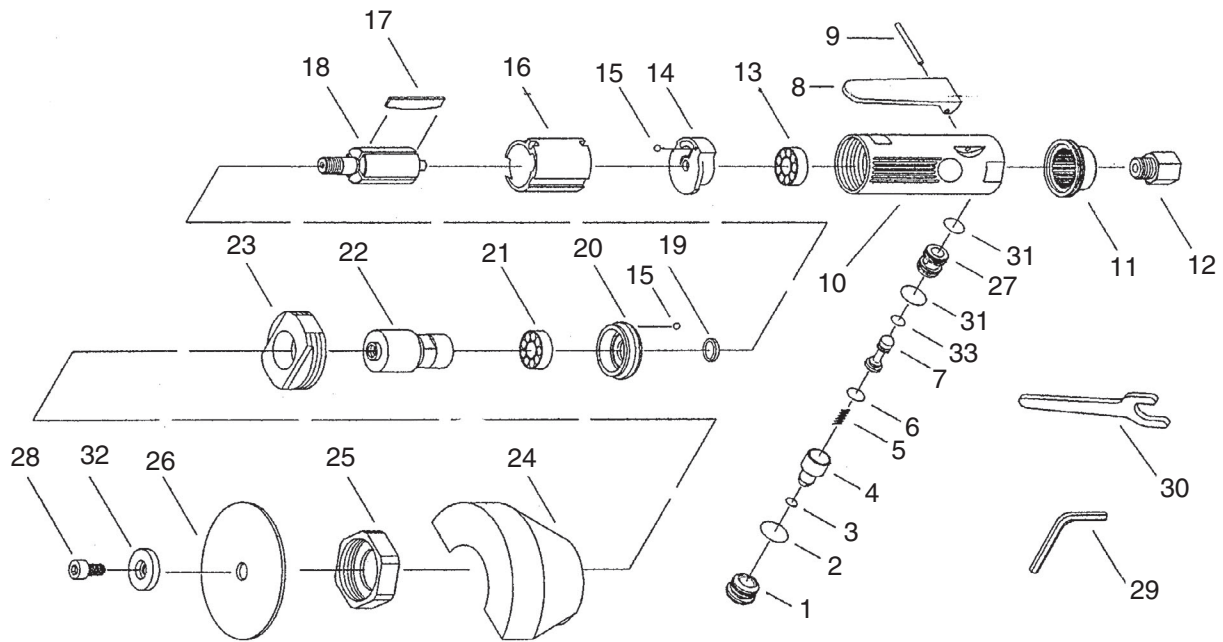

REF	PART #	DESCRIPTION
1	P8122001	VALVE SCREW
2	P8122002	O-RING
3	P8122003	O-RING
4	P8122004	AIR REGULATOR
5	P8122005	SPRING
6	P8122006	O-RING
7	P8122007	VALVE STEM
8	P8122008	THROTTLE LEVER
9	P8122009	LEVER PIN
10	P8122010	MOTOR HOUSING
11	P8122011	EXHAUST SLEEVE
12	P8122012	AIR INLET
13	P626	BALL BEARING 626ZZ
14	P8122014	REAR END PLATE
15	P8122015	BALL
16	P8122016	CYLINDER
17	P8122017	ROTOR BLADE

REF	PART #	DESCRIPTION
18	P8122018	ROTOR
19	P8122019	ROTOR COLLAR
20	P8122020	FRONT END PLATE
21	P6000	BALL BEARING 6000ZZ
22	P8122022	SPINDLE
23	P8122023	CLAMP NUT
24	P8122024	SAFETY GUARD
25	P8122025	NUT
26	P8122026	CUTTING WHEEL
27	P8122027	VALVE BUSHING
28	P8122028	HEX SCREW
29	P8122029	HEX WRENCH
30	P8122030	WRENCH
31	P8122031	O-RING
32	P8122032	WASHER
33	P8122033	O-RING

COPYRIGHT © APRIL, 2007 BY GRIZZLY INDUSTRIAL, INC.

WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.

#TR9247 PRINTED IN TAIWAN