


H0591 Parts Breakdown and List

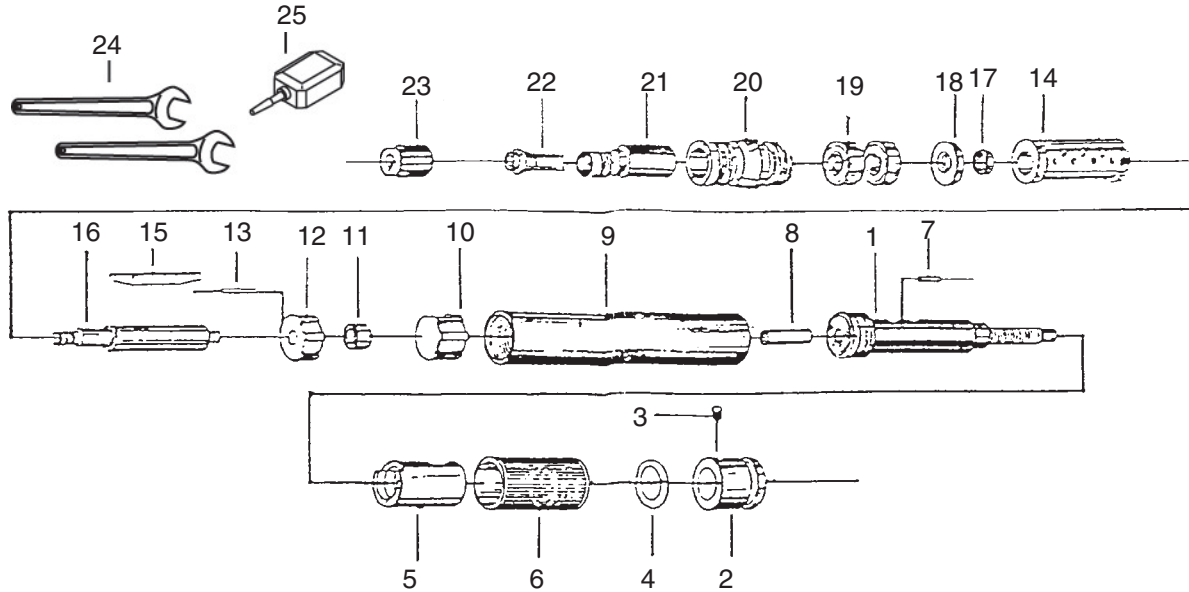

REF	PART #	DESCRIPTION
1	PH0591001	HOUSING PLUG
2	PH0591002	REAR END HOLDER
3	PH0591003	SCREW
4	PH0591004	O-RING
5	PH0591005	BUSHING
6	PH0591006	SLIDING KNOB
7	PH0591007	PIN
8	PH0591008	INTAKE STEEL TUBE
9	PH0591009	SLEEVE
10	PH0591010	INTAKE PLATE
11	PH0591011	BALL BEARING
12	PH0591012	BEARING PLATE
13	PH0591013	PIN

REF	PART #	DESCRIPTION
14	PH0591014	CYLINDER
15	PH0591015	ROTOR BLADES
16	PH0591016	ROTOR
17	PH0591017	LATERAL
18	PH0591018	SPACER
19	PH0591019	BALL BEARING
20	PH0591020	SPINDLE
21	PH0591021	FRONT COVER
22	PH0591022	COLLET
23	PH0591023	COLLET NUT
24	PH0591024	WRENCH SET
25	PH0591025	OIL BOTTLE