

# MODEL H5376 3/4 HP ELECTRIC MOTOR INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

 
### **Model H5376 Specifications**

Power	3/4 HP
Cycle	60 Hz
Voltage	
Amps	
Speed	1725 RPM
Phase	Single-Phase
Class	



# **AWARNING**


Electrocution or fire could result if this motor is not grounded correctly or if your wire connections do not comply with local and state codes. Ensure compliance by checking with a qualified electrician!



# WARNING

Disconnect power when replacing motor. Failure to do this may result in serious personal injury.

### **Replaceable Parts**

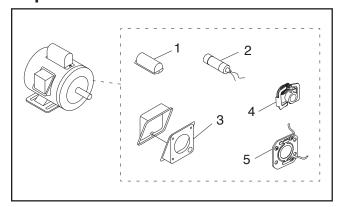

#### REF PART # DESCRIPTION

	1	PH5376001	S CAPACITOR COVER
	2	PH5376002	S CAPACITOR 200M 125V 1-1/2 X 2-3/8
	3	PH5376003	JUNCTION BOX
	4	PH5376004	CENTRIFUGAL SWITCH
	5	PH5376005	CONTACT PLATE

## **Making Wire Connections**

If you are unsure how to attach wires to terminals, DO NOT continue. Contact an electrician for assistance. Connecting wires improperly may cause them to come loose or contact other wires, which can cause electrocution, fire, or a short.

V2.11.24

COPYRIGHT © DECEMBER, 2007 BY GRIZZLY INDUSTRIAL, INC., REVISED NOVEMBER, 2024 (LW) NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.

(FOR MODELS MFD. SINCE 11/24) #JB10234 PRINTED IN TAIWAN