

# MODEL H5379 1 HP ELECTRIC MOTOR INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

### **Model H5379 Specifications**

1 HP
60 Hz
110/220V
110V
11.6/5.8A
1725 RPM
Single-Phase
В



# **AWARNING**


Electrocution or fire could result if this motor is not grounded correctly or if your wire connections do not comply with local and state codes. Ensure compliance by checking with a qualified electrician!



# AWARNING

Disconnect power when replacing motor. Failure to do this may result in serious personal injury.

#### **Replaceable Parts**

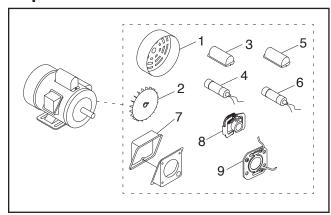

#### REF PART # DESCRIPTION

1	PH5379001	MOTOR FAN COVER
2	PH5379002	MOTOR FAN
3	PH5379003	S CAPACITOR COVER
4	PH5379004	S CAPACITOR 300M 125V 1-3/4 X 3-3/8
5	PH5379005	R CAPACITOR COVER
6	PH5379006	R CAPACITOR 30M 250V 1-3/8 X 2-3/8
7	PH5379007	JUNCTION BOX
8	PH5379008	CENTRIFUGAL SWITCH
9	PH5379009	CONTACT PLATE

## **Making Wire Connections**

If you are unsure how to attach wires to terminals, DO NOT continue. Contact an electrician for assistance. Connecting wires improperly may cause them to come loose or contact other wires, which can cause electrocution, fire, or a short.

V2.11.24

COPYRIGHT © DECEMBER, 2007 BY GRIZZLY INDUSTRIAL, INC., REVISED NOVEMBER, 2024 (LW) NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC. (FOR MODELS MFD. SINCE 08/24) #JB10224 PRINTED IN TAIWAN