




MODEL H5384 2 HP ELECTRIC MOTOR INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com


Model H5384 Specifications

Power 2 HP
Cycle..... 60Hz
Voltage..... 220V
Amps 10.5A
RPM..... 1725
Phase Single
Class..... B

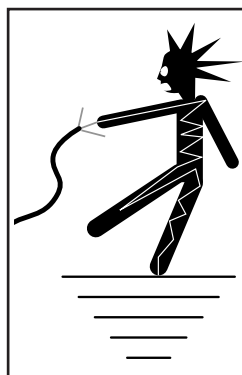

! WARNING


Electrocution or fire could result if this motor is not grounded correctly or if your wire connections do not comply with local and state codes. Ensure compliance by checking with a qualified electrician!

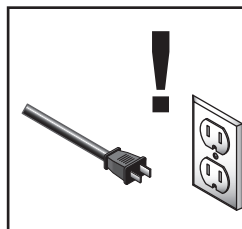

! WARNING

Disconnect power when replacing motor. Failure to do this may result in serious personal injury.

Replaceable Parts

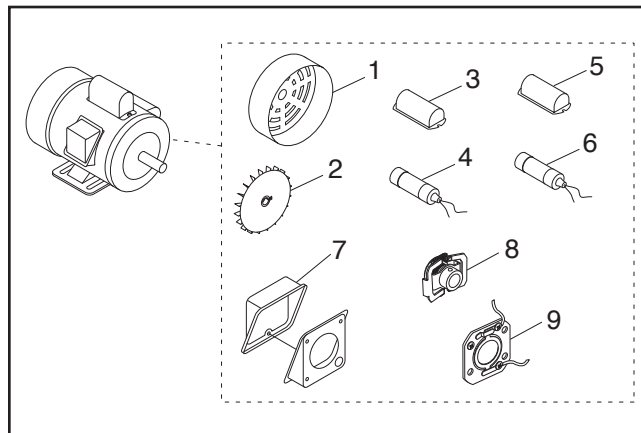

REF PART # DESCRIPTION

1	PH5384001	MOTOR FAN COVER
2	PH5384002	MOTOR FAN
3	PH5384003	S CAPACITOR COVER
4	PH5384004	S CAPACITOR 400M 125V 1-7/8 X 3-3/8
5	PH5384005	R CAPACITOR COVER
6	PH5384006	R CAPACITOR 70M 250V 1-7/8 X 3-3/8
7	PH5384007	JUNCTION BOX
8	PH5384008	CENTRIFUGAL SWITCH
9	PH5384009	CONTACT PLATE

Making Wire Connections

If you are unsure how to attach wires to terminals, DO NOT continue. Contact an electrician for assistance. Connecting wires improperly may cause electrocution, fire, or a short.

COPYRIGHT © DECEMBER, 2007 BY GRIZZLY INDUSTRIAL, INC., REVISED JUNE, 2024 (LW)
NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.
(FOR MODELS MFD. SINCE 08/24) #JB10235 PRINTED IN TAIWAN

V2.06.24

Keep for Future Reference