


# MODEL H5385 2 HP ELECTRIC MOTOR INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

#### **Model H5385 Specifications**

2 HP
60 Hz
110V/220V
110V
18.6A/9.3A
3450 RPM
Single-Phase
В

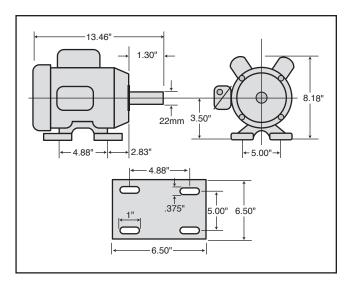




# **AWARNING**

Electrocution or fire could result if this motor is not grounded correctly or if your wire connections do not comply with local and state codes. Ensure compliance by checking with an electrician!

#### **Replaceable Parts**

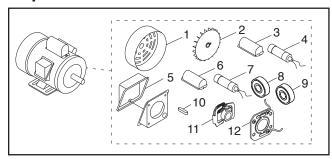

#### REF PART # DESCRIPTION

1	PH5385001	MOTOR FAN COVER
2	PH5385002	MOTOR FAN
3	PH5385003	S CAPACITOR COVER
4	PH5385004	S CAPACITOR 400M 125V 1-3/4 X 3-3/8
5	PH5385005	JUNCTION BOX
6	PH5385006	RUN CAPACITOR COVER
7	PH5385007	R CAPACITOR 40M 250V 1-3/8 X 2-3/8
8	PH5385008	BALL BEARING 6205ZZ
9	PH5385009	BALL BEARING 6203ZZ
10	PH5385010	KEY 7 X 7 X 30
11	PH5385011	CENTRIFUGAL SWITCH 3450 RPM
12	PH5385012	CONTACT PLATE

### **Making Wire Connections**

If you are unsure how to attach wires to terminals, DO NOT continue. Contact an electrician for assistance. Connecting wires improperly may cause them to come loose or contact other wires, which can cause electrocution, fire, or a short.



## **AWARNING**

Disconnect power when replacing motor. Failure to do this may result in serious personal injury.

COPYRIGHT © FEBRUARY, 2025 BY GRIZZLY INDUSTRIAL, INC., NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC. (FOR MODELS MFD. SINCE 02/25) #LW23479 PRINTED IN TAIWAN