


SECTION 9: PARTS

Main Breakdown

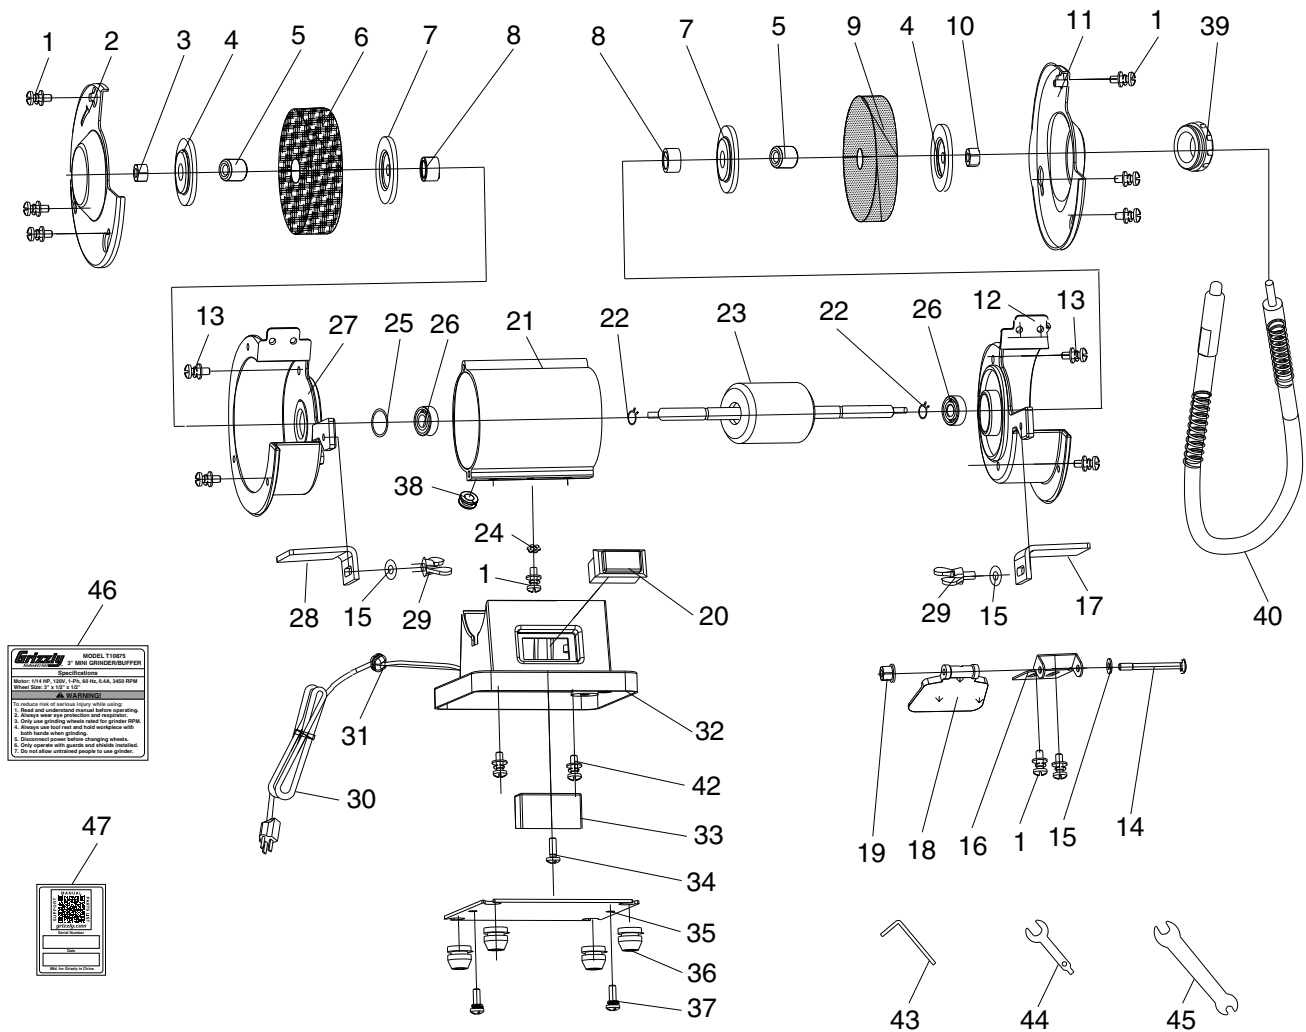

Please Note: We do our best to stock replacement parts whenever possible, but we cannot guarantee that all parts shown here are available for purchase. Call (800) 523-4777 or visit our online parts store at www.grizzly.com to check for availability.



Main Parts List

REF PART #	DESCRIPTION
1	PT10875001 PHLP HD SCR M4-.7 X 8 W/WASHERS
2	PT10875002 WHEEL GUARD (LEFT)
3	PT10875003 HEX NUT M6-1 LH
4	PT10875004 WHEEL FLANGE (OUTER)
5	PT10875005 WHEEL BUSHING
6	PT10875006 BUFFING WHEEL 3" X 3/4" X 1/2"
7	PT10875007 WHEEL FLANGE (INNER)
8	PT10875008 SPACER
9	PT10875009 GRINDING WHEEL 3" X 1/2" X 1/2" 80G
10	PT10875010 HEX NUT M6-1
11	PT10875011 WHEEL GUARD (RIGHT)
12	PT10875012 INNER WHEEL GUARD (RIGHT)
13	PT10875013 PHLP HD SCR M4-.7 X 10 W/WASHERS
14	PT10875014 PHLP HD SCR M4-.7 X 40
15	PT10875015 FLAT WASHER 4MM
16	PT10875016 SPARK DEFLECTOR
17	PT10875017 TOOL REST (RIGHT)
18	PT10875018 SAFETY SHIELD
19	PT10875019 FLANGE NUT M4-.7
20	PT10875020 SWITCH KEDU HY35C ON/OFF
21	PT10875021 STATOR
22	PT10875022 EXT RETAINING RING 10MM
23	PT10875023 ROTOR

REF PART #	DESCRIPTION
24	PT10875024 EXT TOOTH WASHER 4MM
25	PT10875025 WAVY WASHER 21MM
26	PT10875026 BALL BEARING 6900RS
27	PT10875027 INNER WHEEL GUARD (LEFT)
28	PT10875028 TOOL REST (LEFT)
29	PT10875029 WING BOLT M4-.7 X 10
30	PT10875030 POWER CORD 18G 3W 72" 5-15P
31	PT10875031 STRAIN RELIEF 6MM TYPE-1
32	PT10875032 GRINDER BASE
33	PT10875033 R CAPACITOR 3M 250V 1-1/2 X 1/2
34	PT10875034 PHLP HD SCR M4-.7 X 10
35	PT10875035 GRINDER BASE COVER
36	PT10875036 FOOT (RUBBER)
37	PT10875037 PHLP HD SCR M4-.7 X 6 W/WASHER
38	PT10875038 GROMMET 6MM
39	PT10875039 ROTATING SHAFT COVER
40	PT10875040 ROTATING SHAFT
42	PT10875042 PHLP HD SCR M4-.7 X 12 W/WASHERS
43	PT10875043 PIN WRENCH 3MM
44	PT10875044 COLLET WRENCH
45	PT10875045 WRENCH 10MM X 7MM OPEN ENDS
46	PT10875046 MACHINE ID LABEL
47	PT10875047 QR CODE LABEL

WARNING

Safety labels help reduce the risk of serious injury caused by machine hazards. If any label comes off or becomes unreadable, the owner of this machine **MUST** replace it in the original location before resuming operations. For replacements, contact (800) 523-4777 or www.grizzly.com.

