


T28931 Parts Breakdown & List

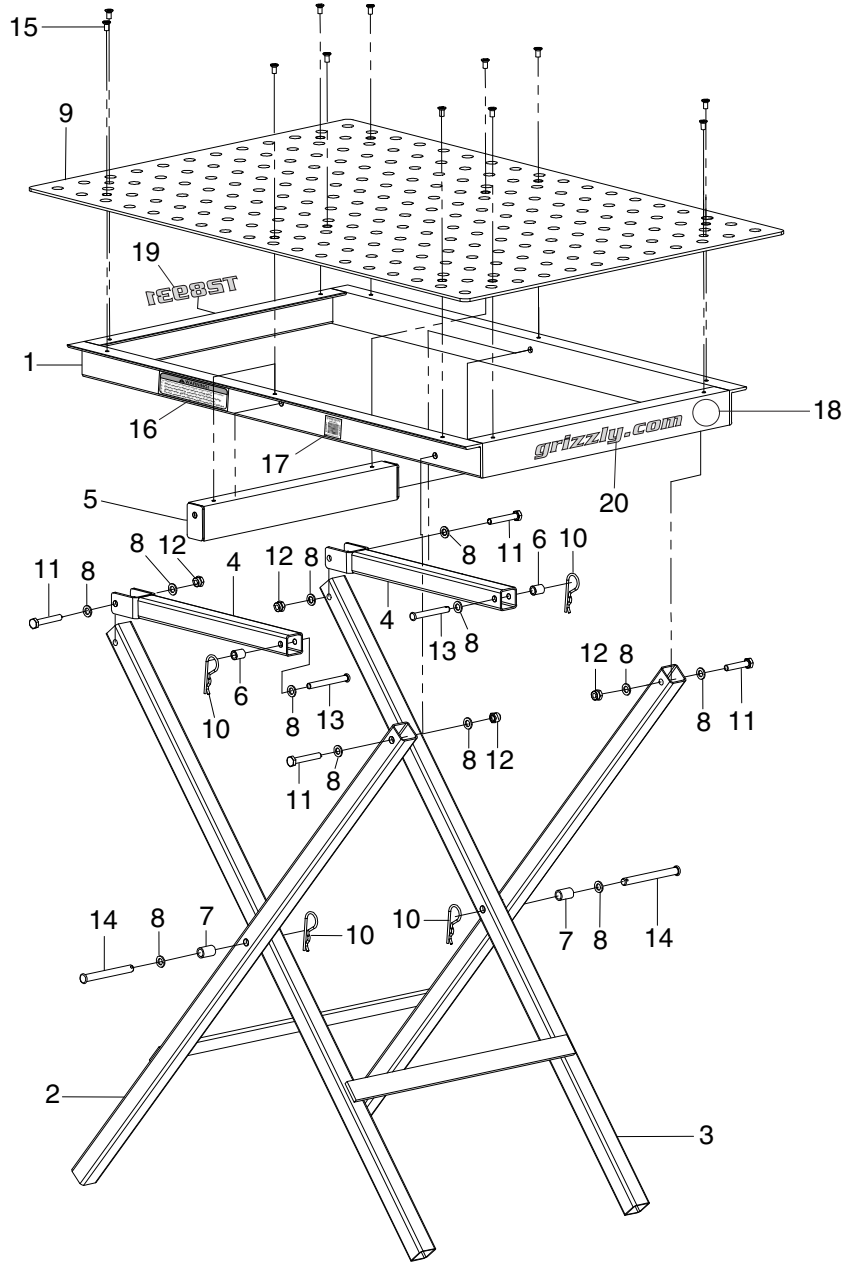

REF PART #	DESCRIPTION
1	PT28931001 FRAME
2	PT28931002 LEG
3	PT28931003 LONG LEG
4	PT28931004 CROSS BRACE
5	PT28931005 FRAME SUPPORT
6	PT28931006 SHORT SHAFT SLEEVE
7	PT28931007 LONG SHAFT SLEEVE
8	PT28931008 FLAT WASHER 8MM
9	PT28931009 TABLE
10	PT28931010 COTTER PIN 3 X 61 HAIRPIN

REF PART #	DESCRIPTION
11	PT28931011 HEX BOLT M8-1.25 X 55
12	PT28931012 HEX NUT M8-1.25
13	PT28931013 UPPER HINGE PIN 8 X 68
14	PT28931014 LOWER HINGE PIN 10 X 94
15	PT28931015 FLAT HD SCR M6-1 X 12
16	PT28931016 WARNING LABEL
17	PT28931017 QR CODE LABEL
18	PT28931018 TOUCH-UP PAINT, GRIZZLY GREEN
19	PT28931019 MODEL NUMBER LABEL
20	PT28931020 GRIZZLY.COM LABEL

Please Note: We do our best to stock replacement parts whenever possible, but we cannot guarantee that all parts shown here are available for purchase. Call (800) 523-4777 or visit our online parts store at www.grizzly.com to check for availability.

