


T32859 Parts Breakdown & List

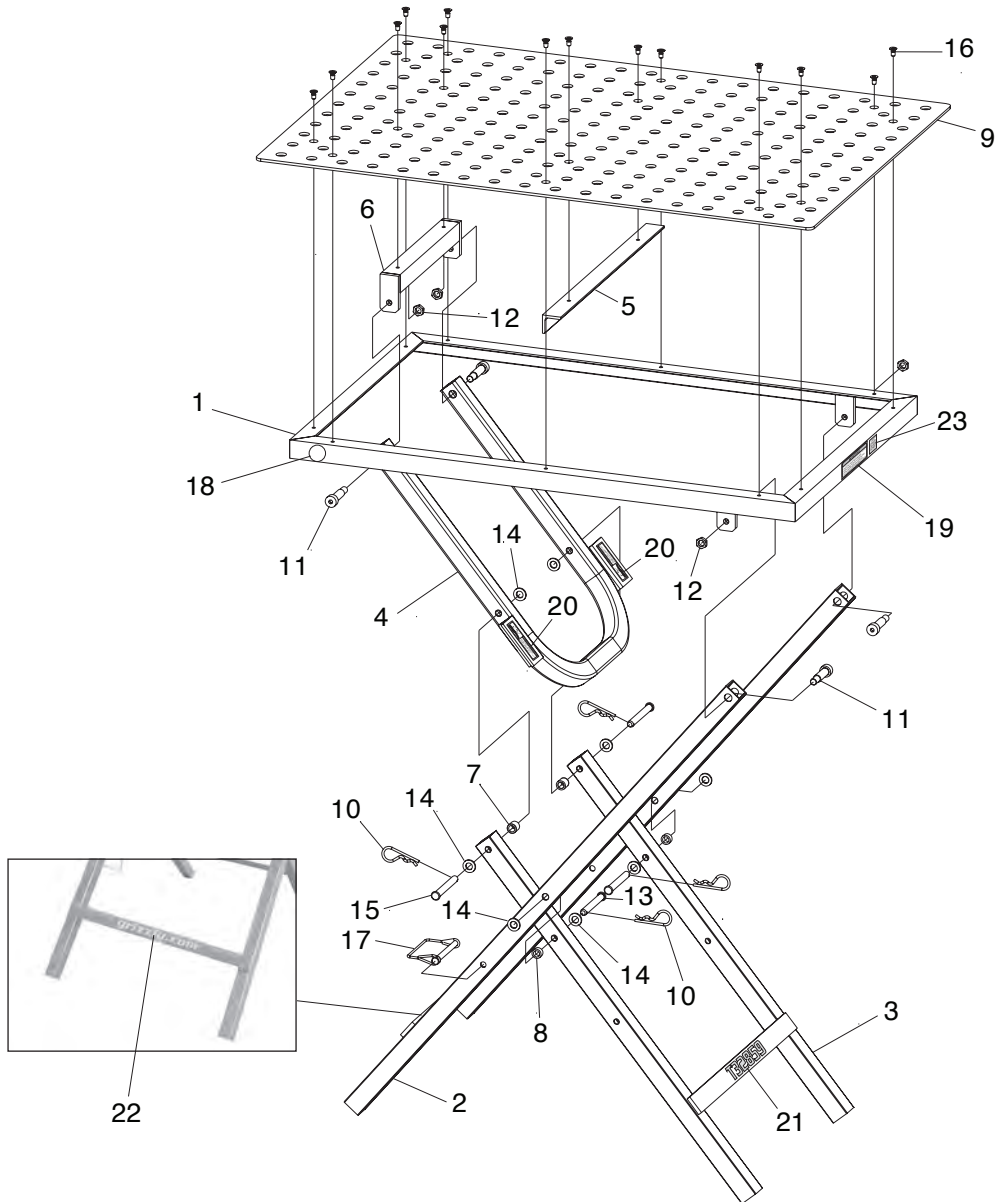

REF	PART #	DESCRIPTION
1	PT32859001	FRAME
2	PT32859002	LEG (LONG)
3	PT32859003	LEG (SHORT)
4	PT32859004	U-BRACE
5	PT32859005	BRACE
6	PT32859006	U-BRACE BRACKET
7	PT32859007	SHAFT SLEEVE (LONG)
8	PT32859008	SHAFT SLEEVE (SHORT)
9	PT32859009	TABLE
10	PT32859010	COTTER PIN M3.5 X 75 HAIRPIN
11	PT32859011	SHOULDER SCREW M10-1.5 X 18, 12 X 30
12	PT32859012	HEX NUT M10-1.5 THIN

REF	PART #	DESCRIPTION
13	PT32859013	HINGE PIN 10 X 80 LOWER
14	PT32859014	FLAT WASHER 10MM
15	PT32859015	HINGE PIN 10 X 85 UPPER
16	PT32859016	FLAT HD SCR M6-1 X 12
17	PT32859017	FOLDING LOCK PIN
18	PT32859018	TOUCH-UP PAINT, GRIZZLY GREEN
19	PT32859019	WARNING LABEL
20	PT32859020	PINCH HAZARD LABEL
21	PT32859021	MODEL NUMBER LABEL
22	PT32859022	GRIZZLY.COM LABEL
23	PT32859023	QR CODE LABEL

Please Note: We do our best to stock replacement parts whenever possible, but we cannot guarantee that all parts shown here are available for purchase. Call (800) 523-4777 or visit our online parts store at www.grizzly.com to check for availability.

