


SECTION 8: PARTS

Main

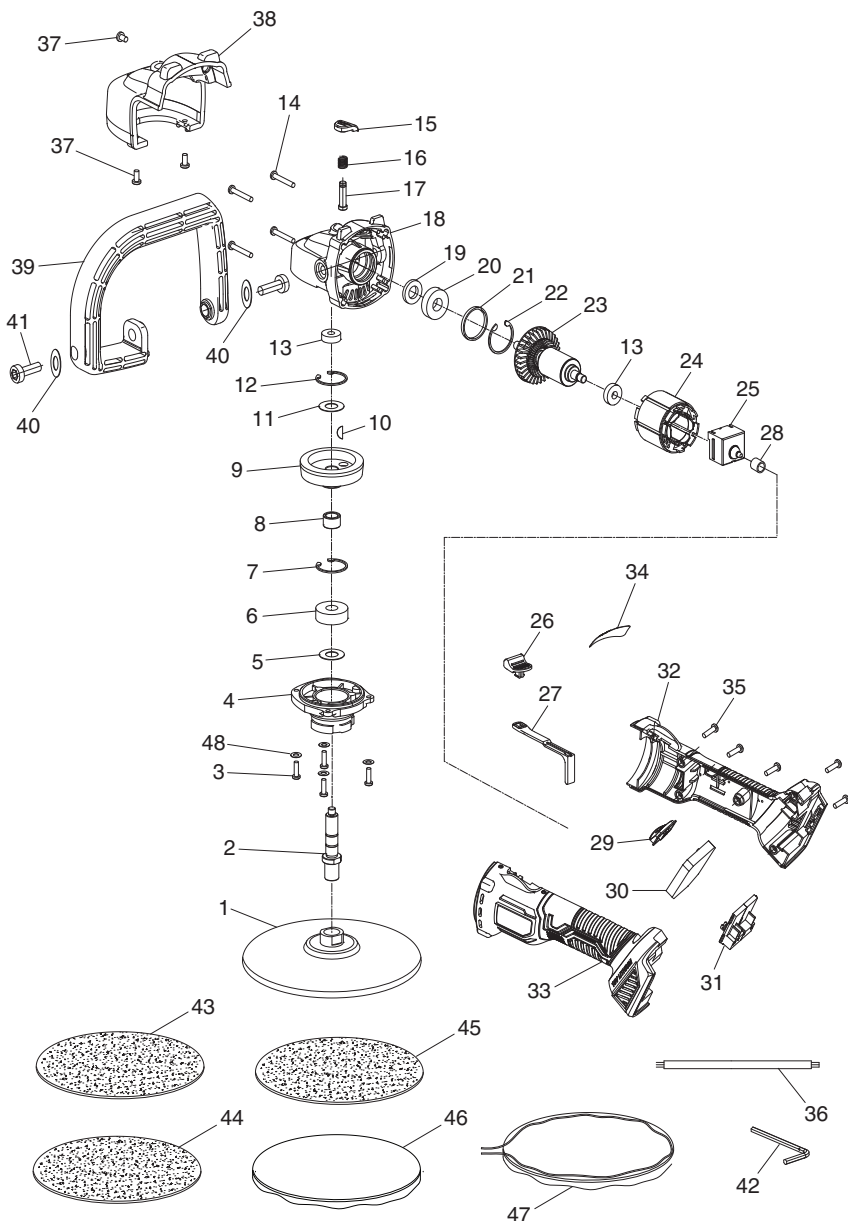


Main Parts List

REF PART #	DESCRIPTION	REF PART #	DESCRIPTION		
1	PT33306001	BACKING PAD 7"	25	PT33306025	START/STOP SWITCH DKLD JT02-3
2	PT33306002	ARBOR 5/8-11 X 7	26	PT33306026	ON/OFF SWITCH
3	PT33306003	PHLP HD SCR M4-.7 X 14	27	PT33306027	SWITCH LEVER
4	PT33306004	GEARBOX COVER	28	PT33306028	SPACER 4ID X 50D X 7L
5	PT33306005	FLAT WASHER 18MM	29	PT33306029	3-SPEED CONTROL SWITCH
6	PT33306006	BALL BEARING 6201-2RS	30	PT33306030	CONTROLLER
7	PT33306007	INT RETAINING RING 32MM	31	PT33306031	BATTERY TERMINAL BLOCK
8	PT33306008	SPACER 10ID X 12OD X 5L	32	PT33306032	MOTOR HOUSING (RIGHT)
9	PT33306009	TRANSFER GEAR 53T	33	PT33306033	MOTOR HOUSING (LEFT)
10	PT33306010	WOODRUFF KEY 4 X 6.5 X 14.5	34	PT33306034	SPEED LABEL
11	PT33306011	WAVY WASHER 7MM	35	PT33306035	TAP SCREW M4 X 18
12	PT33306012	INT RETAINING RING 12MM	36	PT33306036	MOTOR WIRE 22G 6"
13	PT33306013	BALL BEARING 607-2RS	37	PT33306037	PHLP HD SCR M4-.7 X 10
14	PT33306014	TAP SCREW M4 X 28	38	PT33306038	RUBBER GRIP COVER
15	PT33306015	LOCK BUTTON	39	PT33306039	D-HANDLE
16	PT33306016	COMPRESSION SPRING 0.6 X 9.0 X 12	40	PT33306040	FLAT WASHER 10.5 X 18 X 1.6MM
17	PT33306017	THREADED PIN 8 X 20MM	41	PT33306041	CAP SCREW M10-1.5 X 25
18	PT33306018	GEARBOX	42	PT33306042	HEX WRENCH 8MM
19	PT33306019	FLAT WASHER 12 X 23 X 2MM	43	PT33306043	SANDING DISC 7" 60-GRIT
20	PT33306020	BALL BEARING 6001-2RS	44	PT33306044	SANDING DISC 7" 40-GRIT
21	PT33306021	SEAL 22 X 24 X 7MM	45	PT33306045	SANDING DISC 7" 120-GRIT
22	PT33306022	INT RETAINING RING 22MM	46	PT33306046	MICROFIBER PAD 7"
23	PT33306023	ARMATURE	47	PT33306047	WOOL BONNET 7"
24	PT33306024	STATOR	48	PT33306048	FLAT WASHER 4MM

Parts breakdown provided for reference only. Not all parts shown are available for purchase.



Labels & Cosmetics

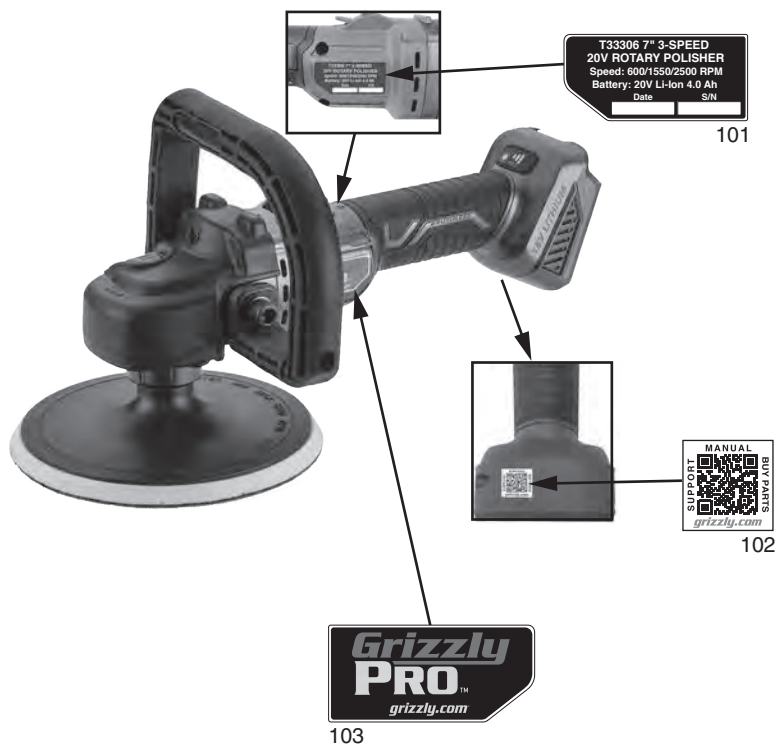

REF	PART #	DESCRIPTION
101	PT33306101	MACHINE ID LABEL
102	PT33306102	QR CODE LABEL

REF	PART #	DESCRIPTION
103	PT33306103	GRIZZLY PRO LABEL

⚠ WARNING

Safety labels help reduce the risk of serious injury caused by machine hazards. If any label comes off or becomes unreadable, the owner of this tool **MUST** replace it in the original location before resuming operations. For replacements, contact (800) 523-4777 or www.grizzly.com.

