


# T34007 Parts Breakdown & List

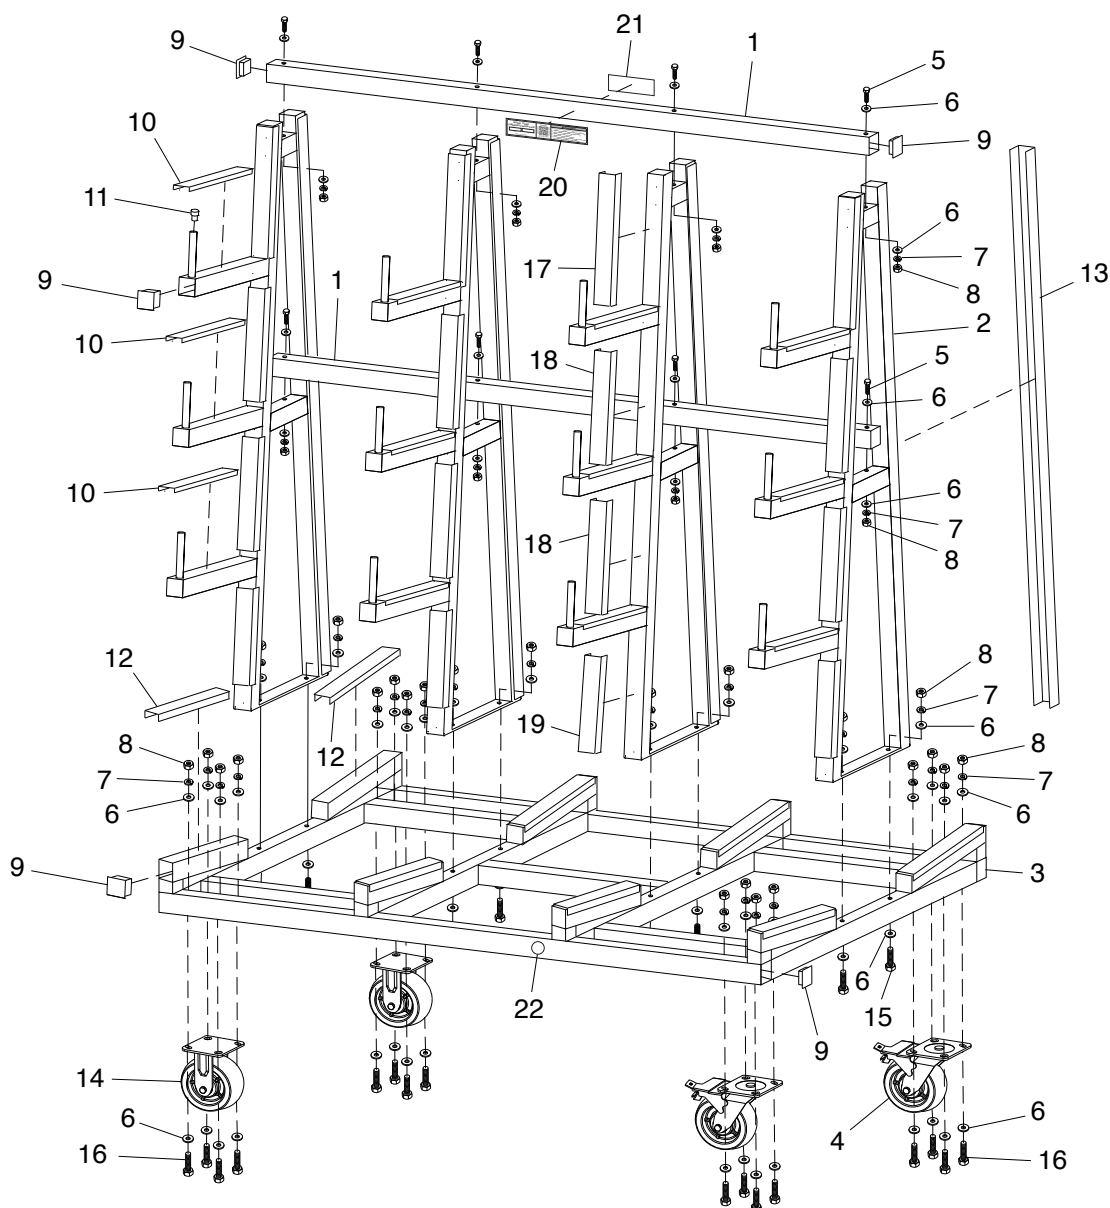

REF	PART #	DESCRIPTION
1	PT34007001	BEAM
2	PT34007002	SHELF FRAME
3	PT34007003	BASE FRAME
4	PT34007004	CASTER, 5" LOCKING SWIVEL
5	PT34007005	HEX BOLT M10-1.5 X 100
6	PT34007006	FLAT WASHER 10MM
7	PT34007007	LOCK WASHER 10MM
8	PT34007008	HEX NUT M10-1.5
9	PT34007009	END CAP
10	PT34007010	SHELF COVER 13-1/4" X 1-9/16"
11	PT34007011	BUMPER PLUG

REF	PART #	DESCRIPTION
12	PT34007012	SHELF COVER 14-1/4" X 1-9/16"
13	PT34007013	SHELF COVER 50-1/2" X 1-9/16"
14	PT34007014	CASTER, 5" FIXED
15	PT34007015	HEX BOLT M10-1.5 X 65
16	PT34007016	HEX BOLT M10-1.5 X 25
17	PT34007017	SHELF COVER 11-5/8" X 1-9/16"
18	PT34007018	SHELF COVER 8-1/4" X 1-9/16"
19	PT34007019	SHELF COVER 6-3/8" X 1-9/16"
20	PT34007020	MACHINE ID LABEL
21	PT34007021	GRIZZLY LOGO LABEL
22	PT34007022	TOUCH-UP PAINT, GRIZZLY BLACK

**Please Note:** We do our best to stock replacement parts whenever possible, but we cannot guarantee that all parts shown here are available for purchase. Call (800) 523-4777 or visit our online parts store at [www.grizzly.com](http://www.grizzly.com) to check for availability.

