


T34583 Parts Breakdown & List

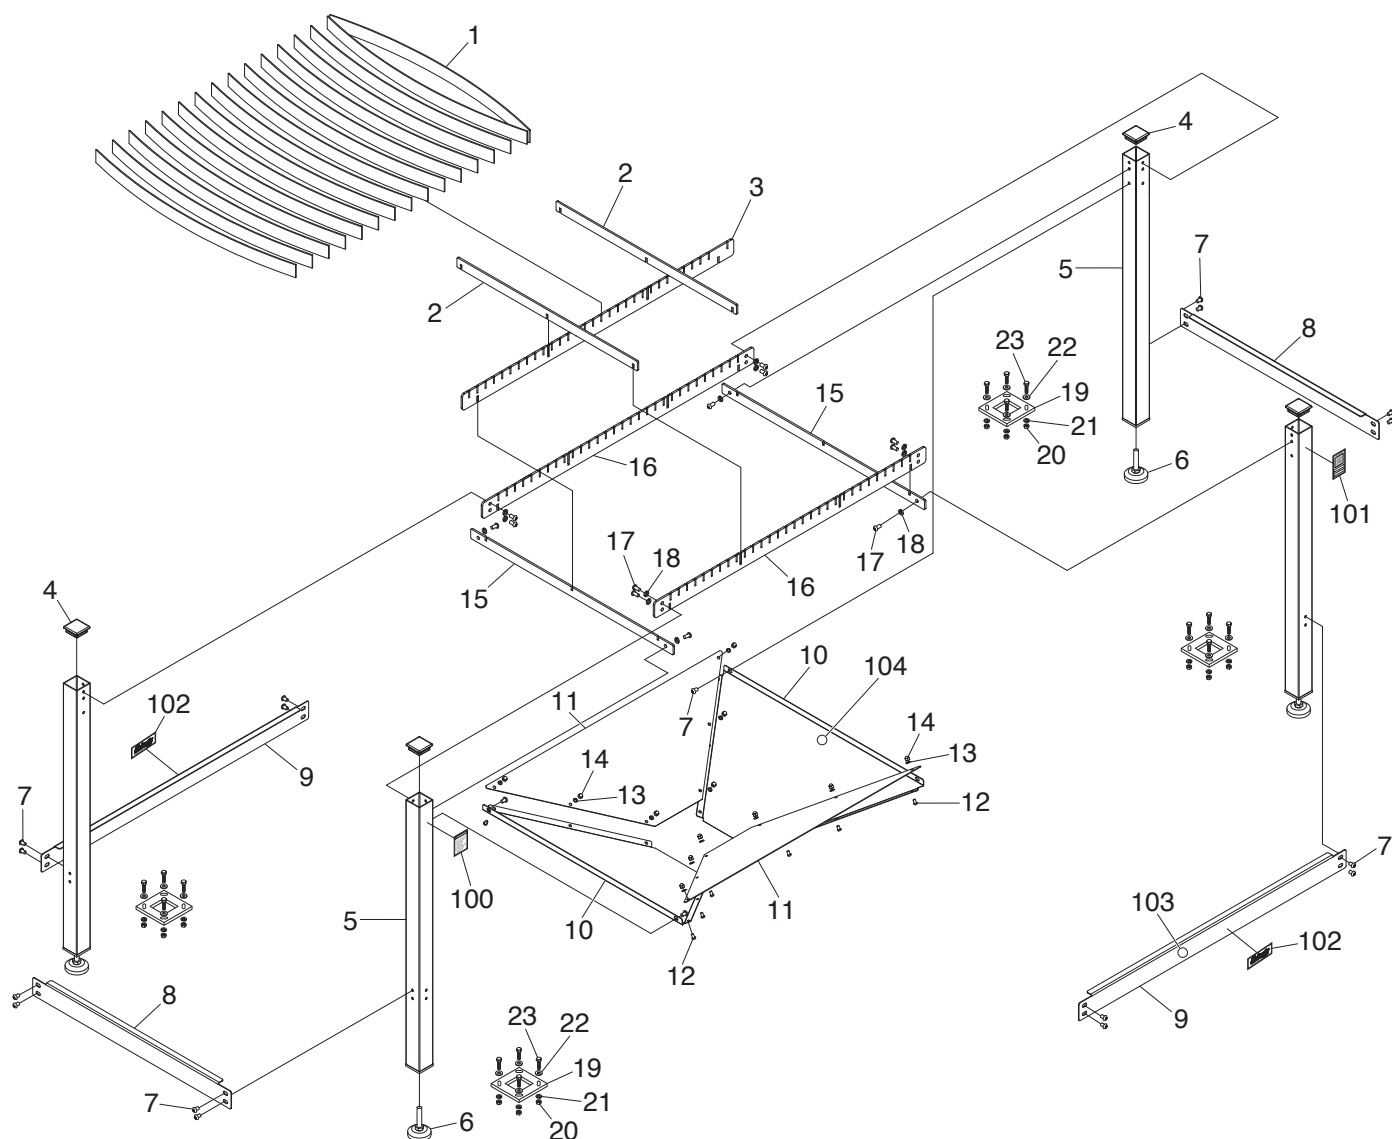

REF	PART #	DESCRIPTION
1	PT34583001	TABLE RIB
2	PT34583002	CROSSBEAM RIB, UPPER
3	PT34583003	CENTER RIB
4	PT34583004	LEG CAP
5	PT34583005	LEG
6	PT34583006	ADJUSTABLE FOOT M12-1.75 X 45
7	PT34583007	BUTTON HD CAP SCR M8-1.25 X 10
8	PT34583008	LEG BRACE, SHORT
9	PT34583009	LEG BRACE, LONG
10	PT34583010	DUST CHUTE PANEL, SIDE
11	PT34583011	DUST CHUTE PANEL, CENTER
12	PT34583012	BUTTON HD CAP SCR M6-1 X 8
13	PT34583013	LOCK WASHER 6MM
14	PT34583014	ACORN NUT M6-1

REF	PART #	DESCRIPTION
15	PT34583015	CROSSBEAM RIB, LOWER
16	PT34583016	SUPPORT RIB
17	PT34583017	BUTTON HD CAP SCR M8-1.25 X 16
18	PT34583018	LOCK WASHER 8MM
19	PT34583019	CASTER MOUNTING PLATE
20	PT34583020	HEX NUT M10-1.5
21	PT34583021	LOCK WASHER 10MM
22	PT34583022	FLAT WASHER 10MM
23	PT34583023	HEX BOLT M10-1.5 X 20
100	PT34583100	WARNING LIST LABEL
101	PT34583101	QR CODE LABEL
102	PT34583102	GRIZZLY NAMEPLATE 65MM
103	PT34583103	TOUCH-UP PAINT, GRIZZLY GREEN
104	PT34583104	TOUCH-UP PAINT, GLOSS BLACK

Please Note: We do our best to stock replacement parts whenever possible, but we cannot guarantee that all parts shown here are available for purchase. Call (800) 523-4777 or visit our online parts store at www.grizzly.com to check for availability.

