



For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

MODEL T34446 DRAWER FOR T34445 MITER SAW WORKSTATION INSTRUCTIONS

Introduction

The Model T34446 Drawer for the Model T34445 Miter Saw Workstation mounts directly to the workstation legs, providing convenient storage for frequently used items like blades, pencils, measuring tools, and safety glasses.



Figure 1. Model T34446 Drawer.

Specifications

Drawer Dimensions23¼" W x 15½" D x 2" H

Construction MaterialSteel & Aluminum

Needed for Assembly

Safety Glasses (Per Person).....1 Pr.

Hex Wrench 5mm..... 1

Wrench or Socket 13mm..... 1



Inventory

Main (Figure 2)	Qty
A. Left Rail Plate	1
B. Right Rail Plate.....	1
C. Drawer.....	1
D. Button Head Cap Screws M8-1.25 x 20.....	8

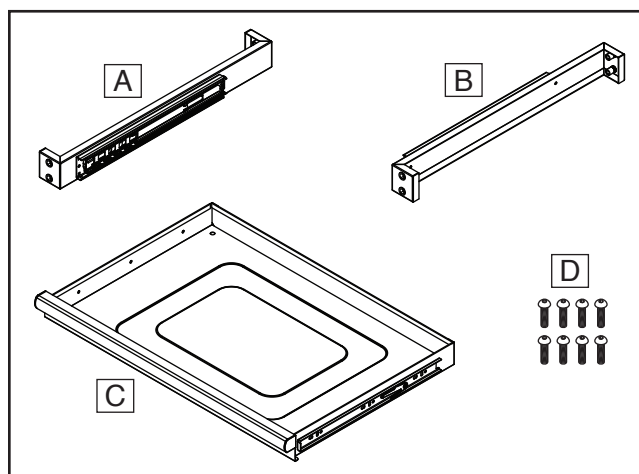


Figure 2. Inventory.



Installation

Before beginning the assembly process, refer to **Needed for Setup** in this manual and gather all listed items.

To install drawer on workstation:

1. Prepare workstation for drawer installation.
 - If workstation *is* already assembled, remove connector plates, and move desired stand assembly away from workstation before proceeding to **Step 2**.
 - If workstation *is not* already assembled, then complete **Steps 1–10** in **T34445 Instructions** before proceeding to **Step 2**.
2. Attach right and left rail plates to workstation with (8) M8-1.25 x 20 button head cap screws, as shown in **Figure 3**.

Note: Ensure holes in each rail plate align with fastener holes just below top braces of stand assembly.

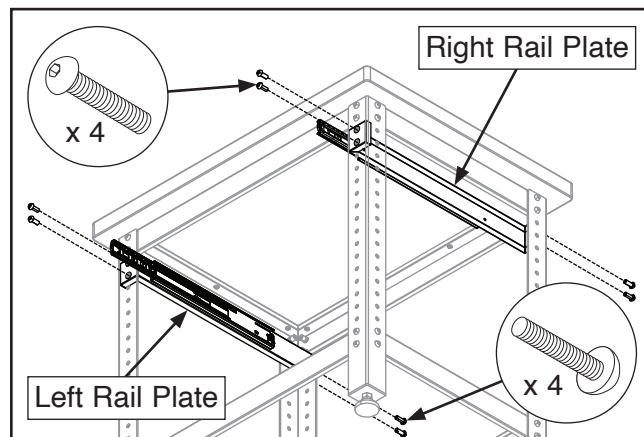


Figure 3. Attaching rail plates to workstation (shown from bottom for clarity).

3. Align drawer slides with rail plate slides, then push in until drawer clicks into place (see **Figure 4**).

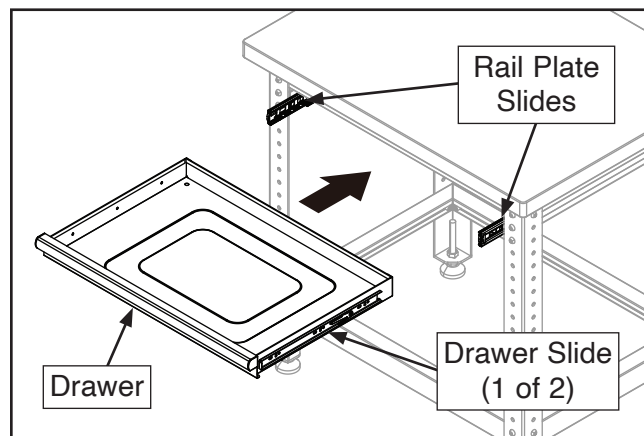


Figure 4. Location of drawer slides and rail plate slides.

4. Proceed to **Step 11** in **T34445 Instructions**.

